

Function Check

BODY CONTROL SYSTEM (DIAGNOSTICS)

12.Function Check

A: OPERATION

NOTE:

- In order to check the body integrated unit function, inspect the body integrated unit and actuator using Subaru Select Monitor without operating switches.
- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

B: LIST

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «Each System Check» display, select {Integ. unit mode}.
- 3) On «Integ. unit mode» display, select {Work Support}.
- 4) On «Work Support» display, select {Active Test}.
- 5) Select an item to be operated on «Active Test» display, and press the [OK] button.
- 6) Pressing [Next] starts, [End] cancels the operation and [OK] returns to the System Operation Check Mode display screen.

Item	Display	Note
lock actuat. LOCK output	ON/OFF	—
All seat UNLOCK output	ON/OFF	—
R gate/trunk UNLOCK output	ON/OFF	—
Shift lock solenoid output	ON/OFF	—
Key lock solenoid output	ON/OFF	—
Keyless Buzzer Output	ON/OFF	—
Horn Output	ON/OFF	—

NOTE:

- If not equipped (based on area or condition), process will not go on.
- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.