

Ground Circuit


WIRING SYSTEM

5. Ground Circuit

A: WIRING DIAGRAM

a

a

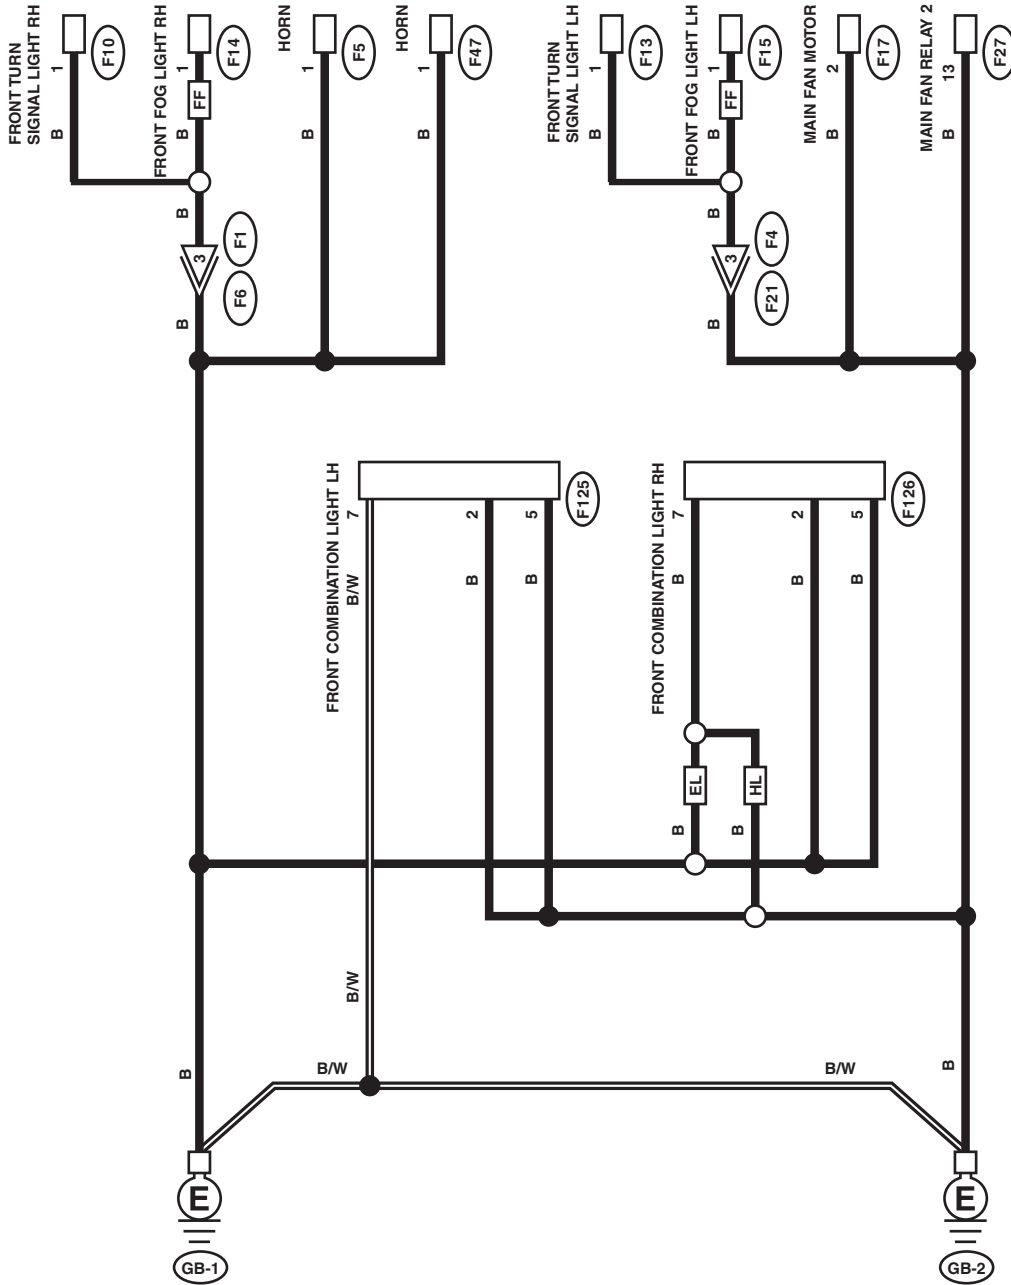

HL : HALOGEN MODEL
 EL : EXCEPT FOR HALOGEN MODEL


FF : WITH FRONT FOG LIGHT

WI-44270

Ground Circuit

b

b

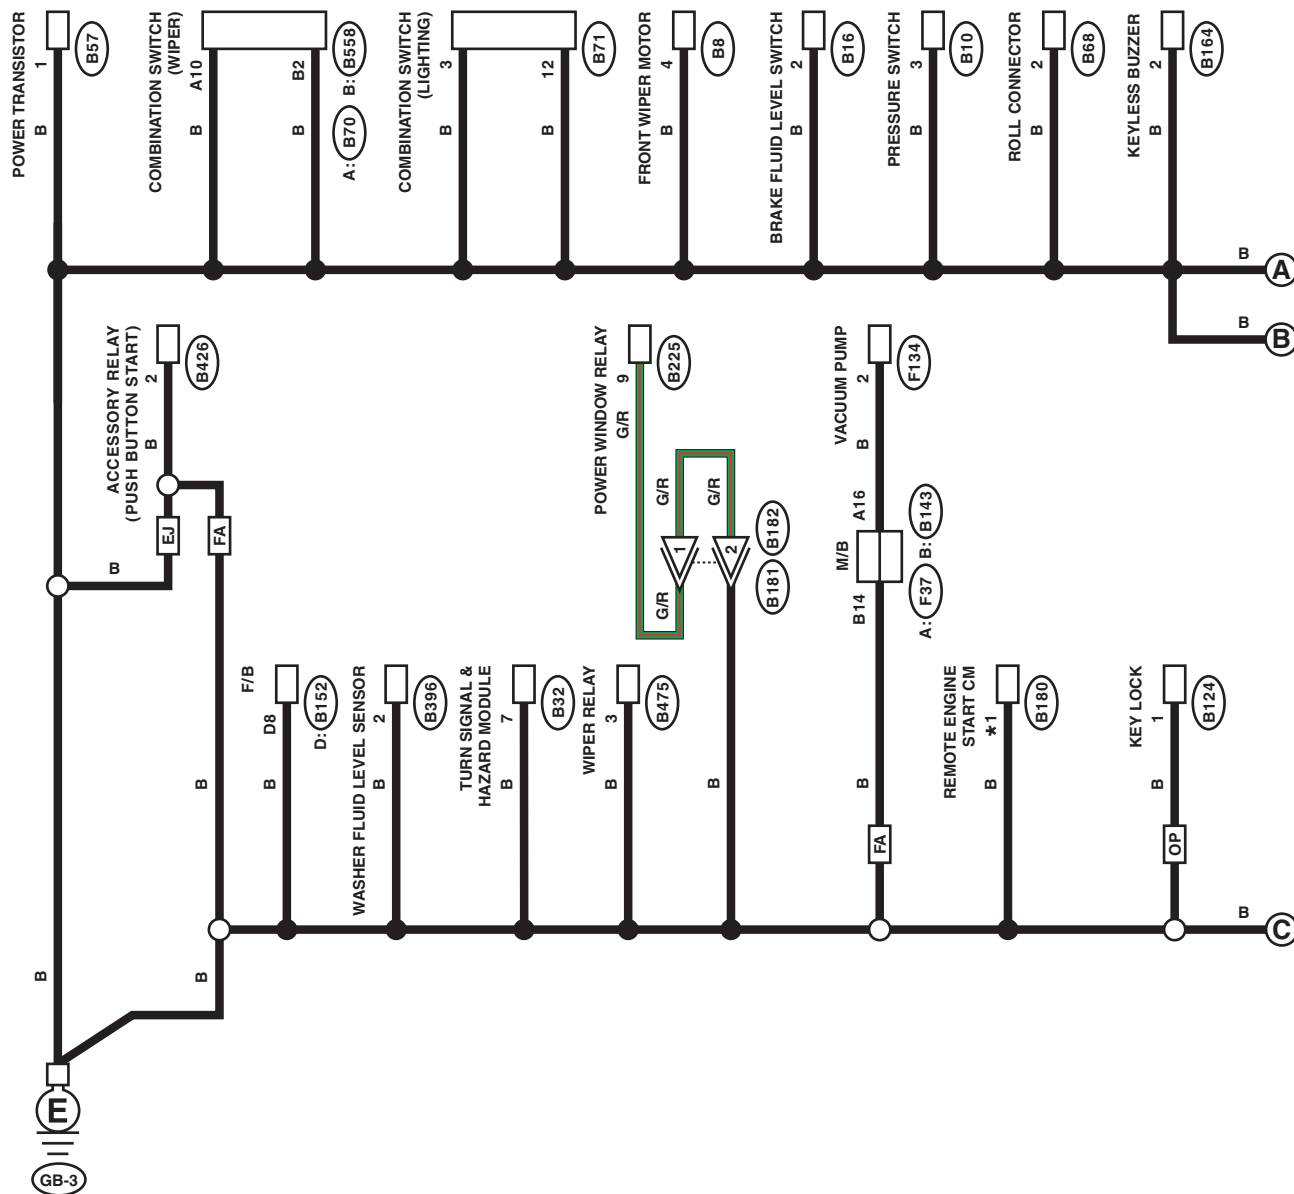

- FA** : ENGINE TYPE FA
- EJ** : ENGINE TYPE EJ
- OP** : WITHOUT PUSH BUTTON START


*1 : WITHOUT PUSH BUTTON START : 3
WITH PUSH BUTTON START : 4

Ground Circuit

WIRING SYSTEM

C

C

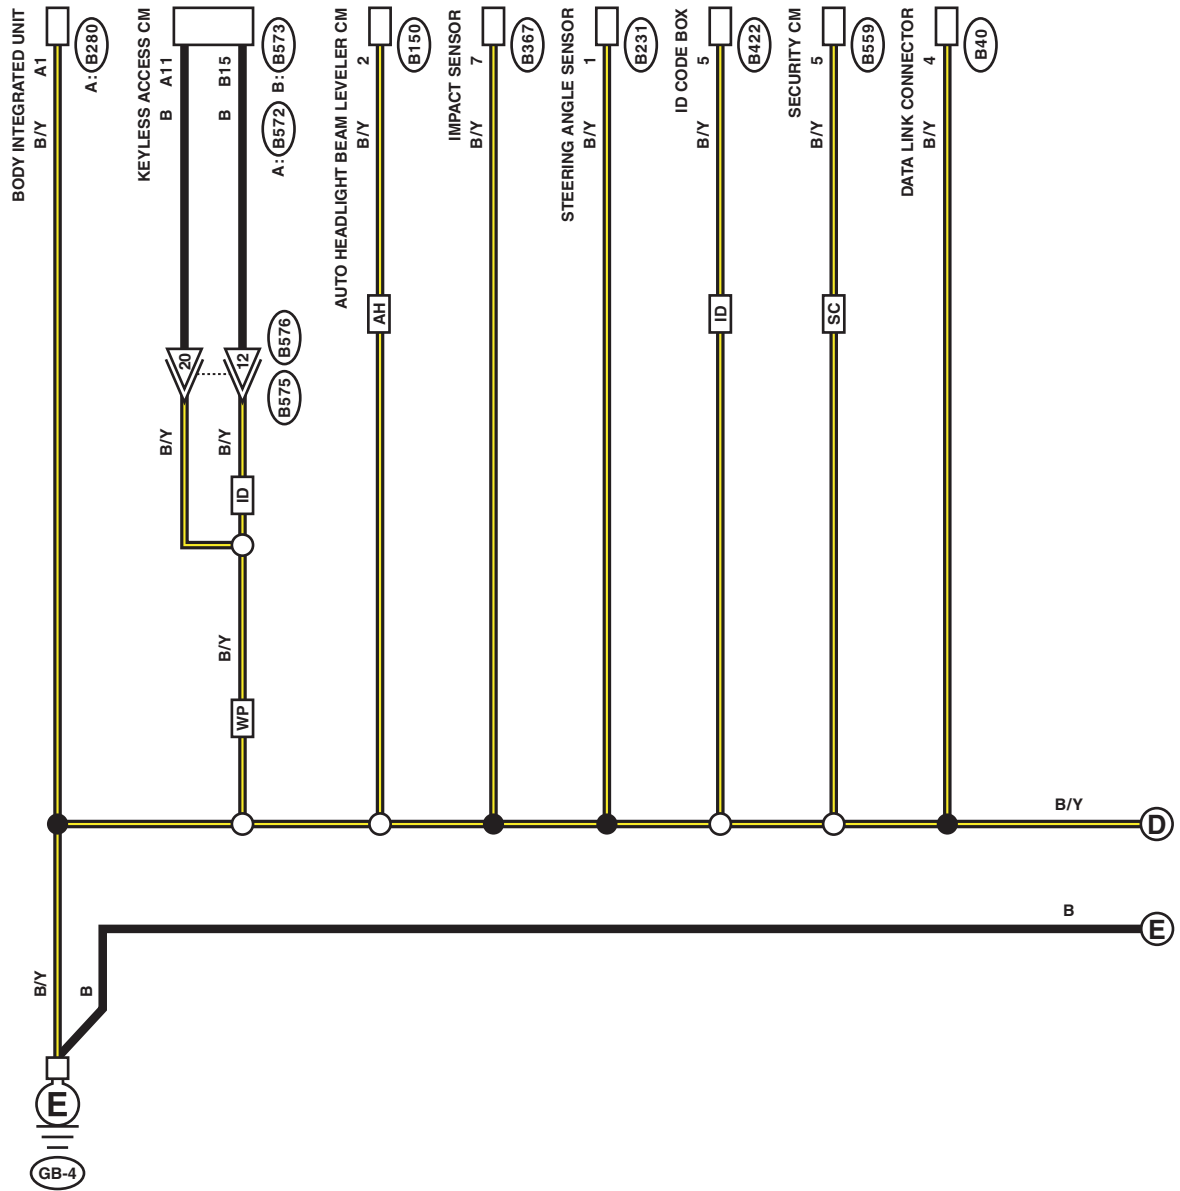

WP : WITH PUSH BUTTON START


ID : WITH ID CODE BOX

SC : WITH SECURITY CM

AH : WITH AUTO HEADLIGHT BEAM LEVELER

WI-44272

Ground Circuit

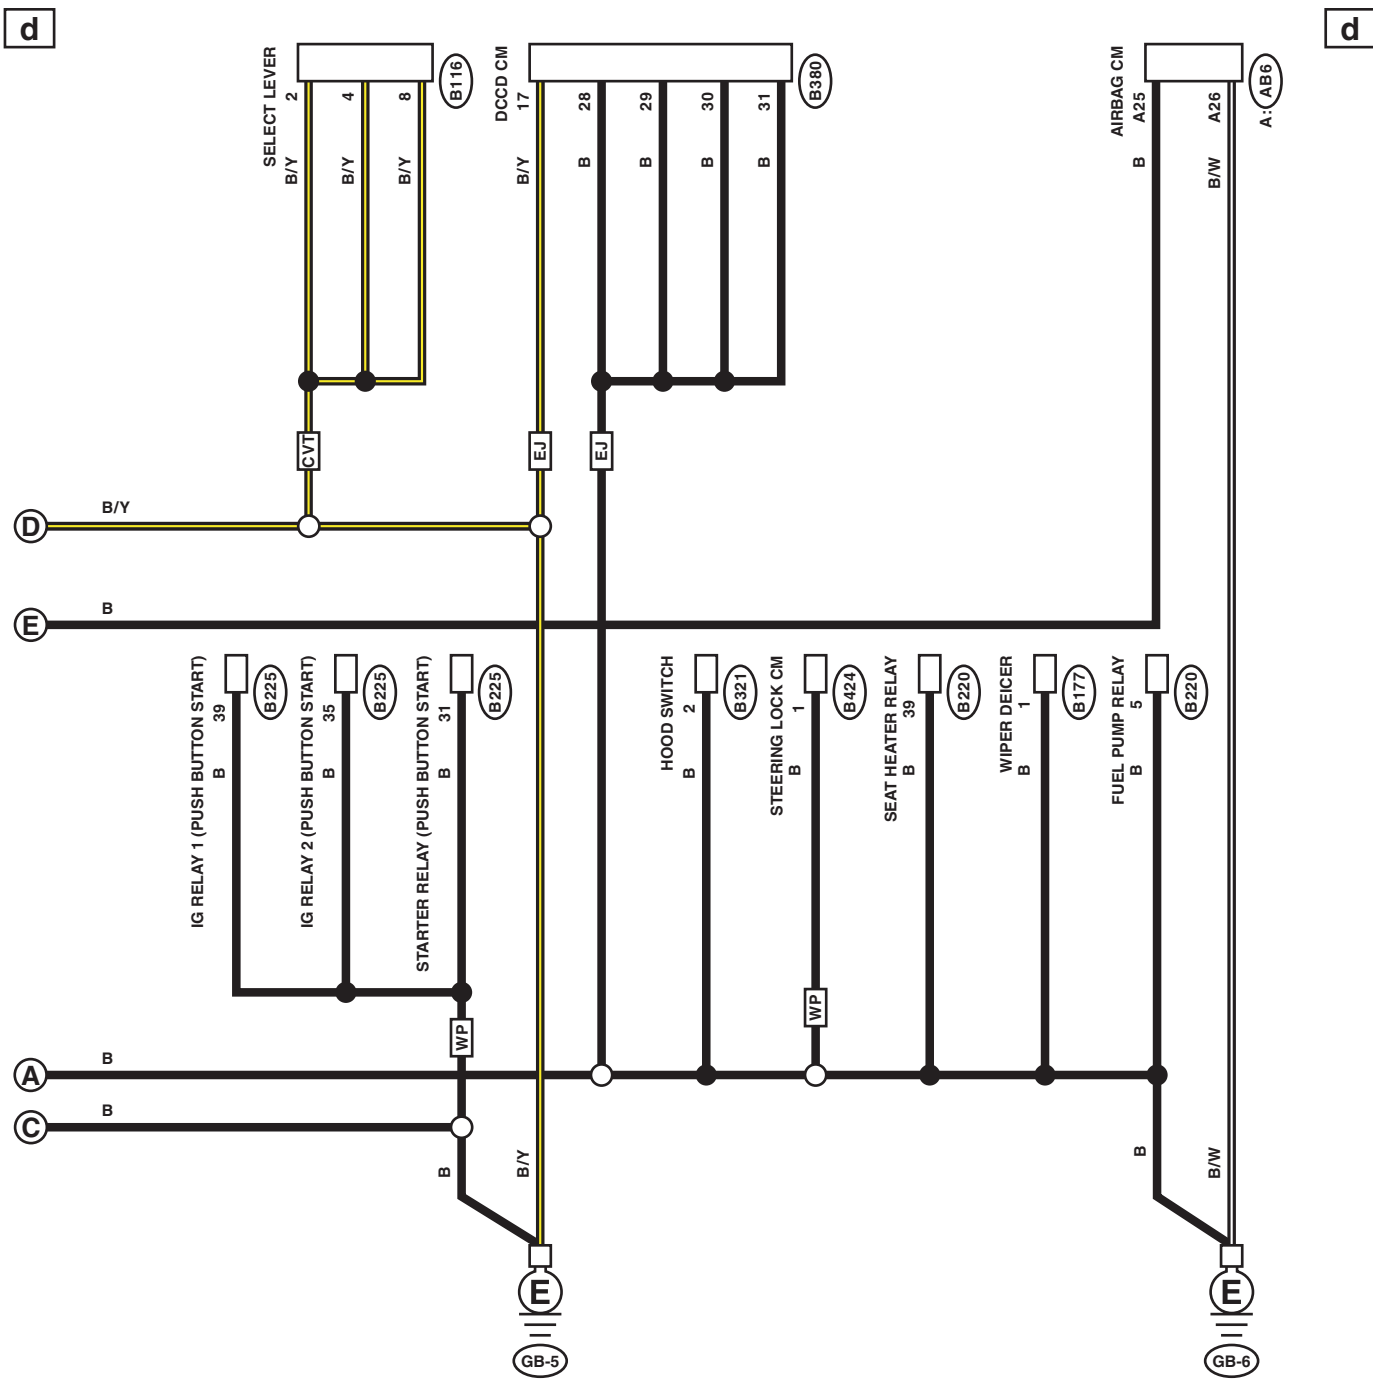


WP : WITH PUSH BUTTON START
 EJ : ENGINE TYPE EJ

Ground Circuit

WIRING SYSTEM

e

e

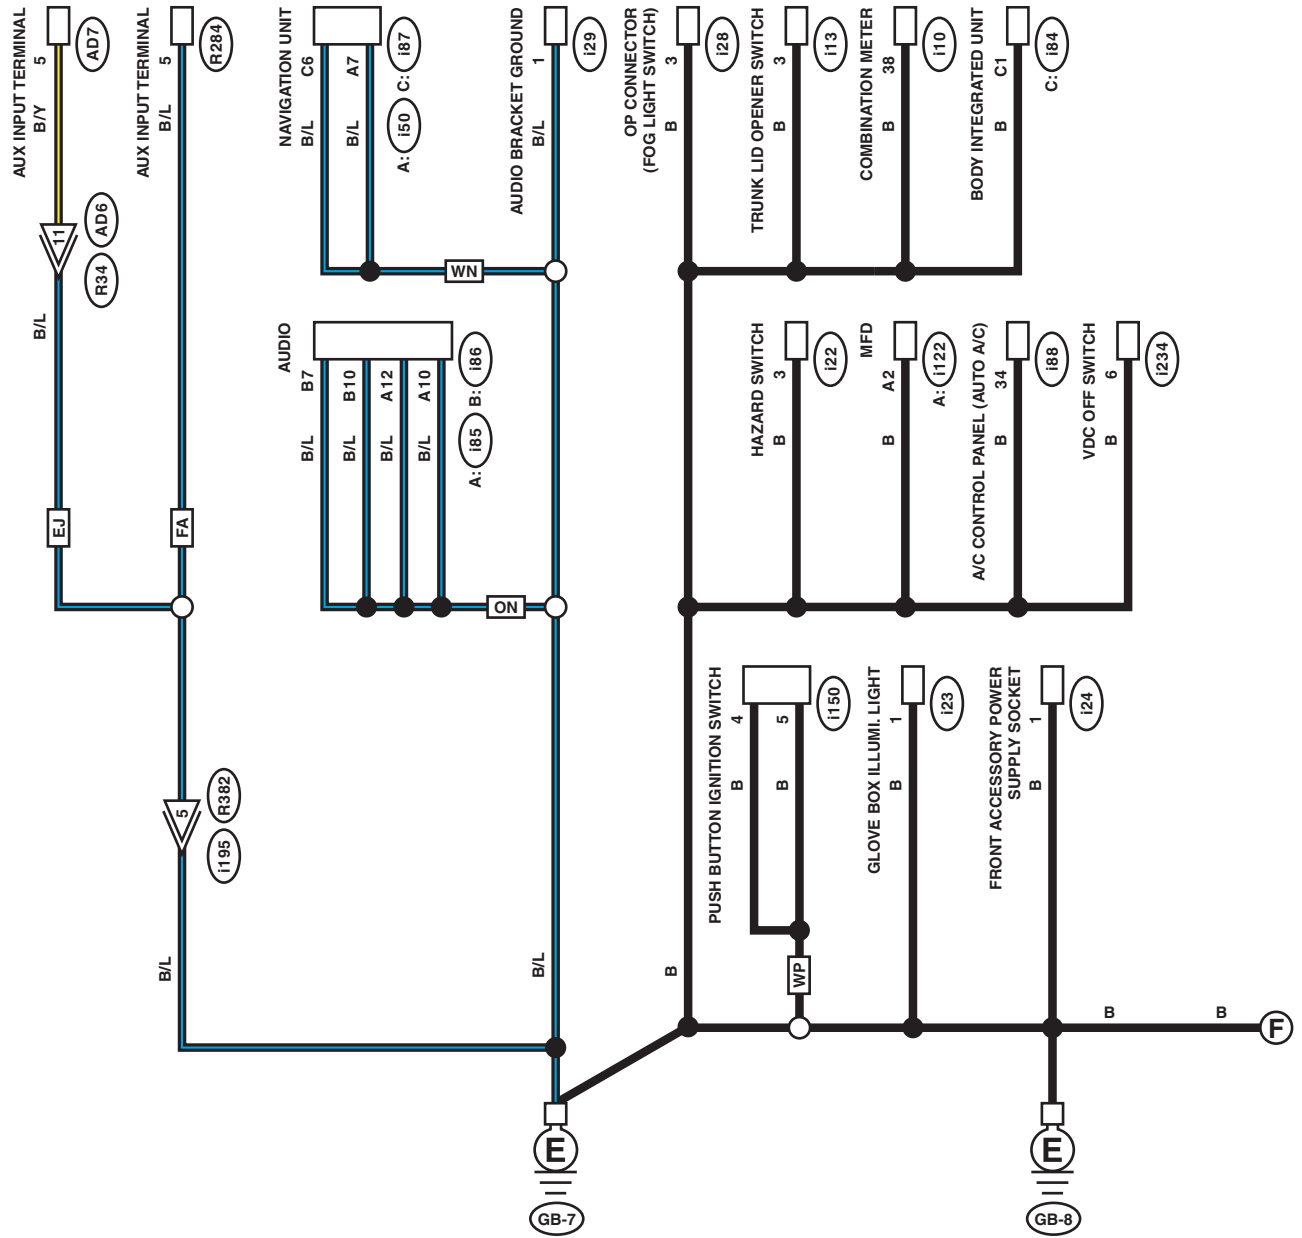

- ON** : WITHOUT NAVIGATION
- WN** : WITH NAVIGATION
- WP** : WITH PUSH BUTTON START


- FA** : ENGINE TYPE FA
- EJ** : ENGINE TYPE EJ

WI-46868

Ground Circuit

f

f

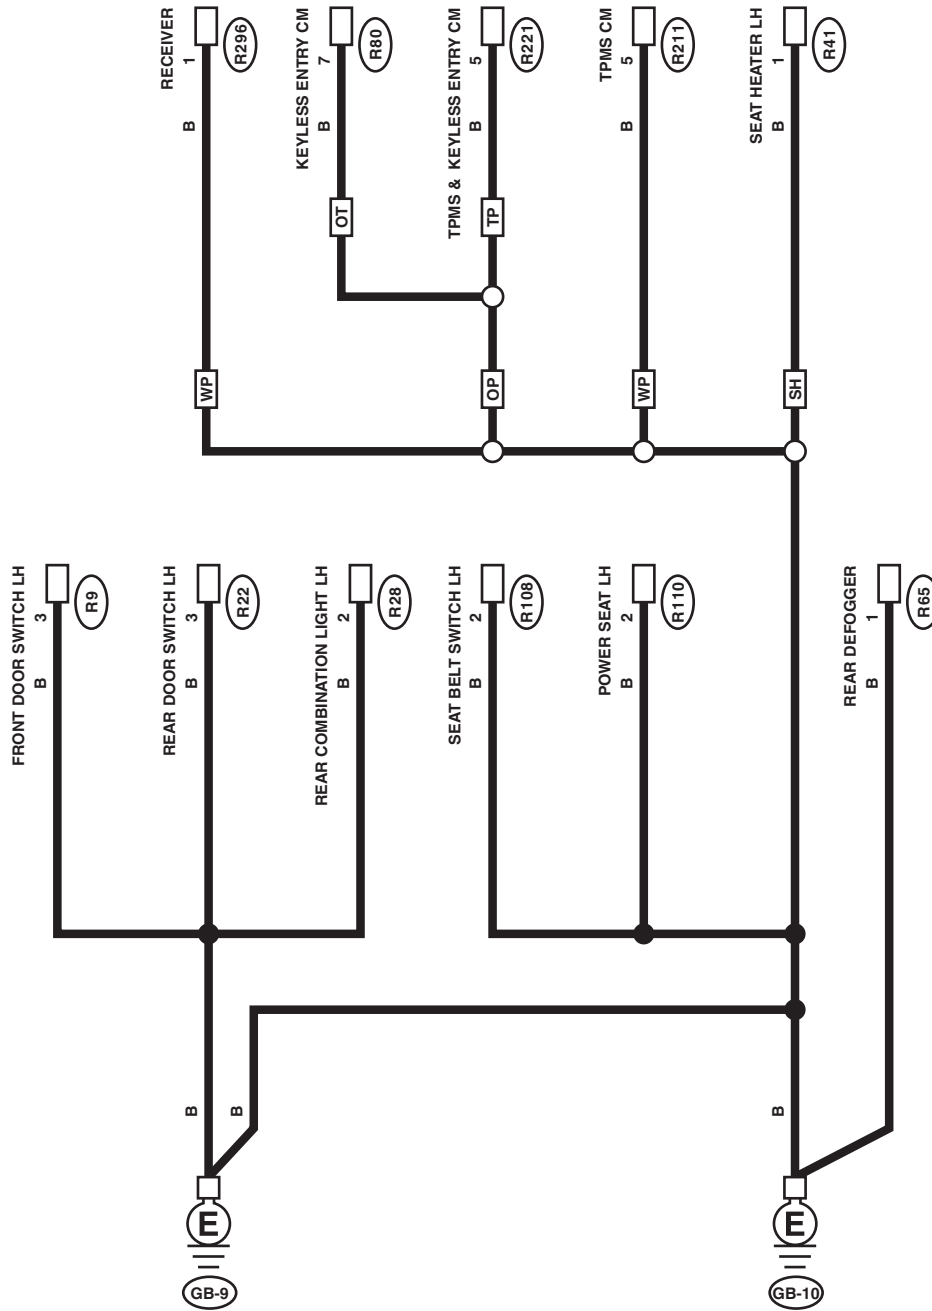

OT : WITHOUT TPMS
 TP : WITH TPMS


SH : WITH SEAT HEATER
 OP : WITHOUT PUSH BUTTON START
 WP : WITH PUSH BUTTON START

Ground Circuit

WIRING SYSTEM

g

g

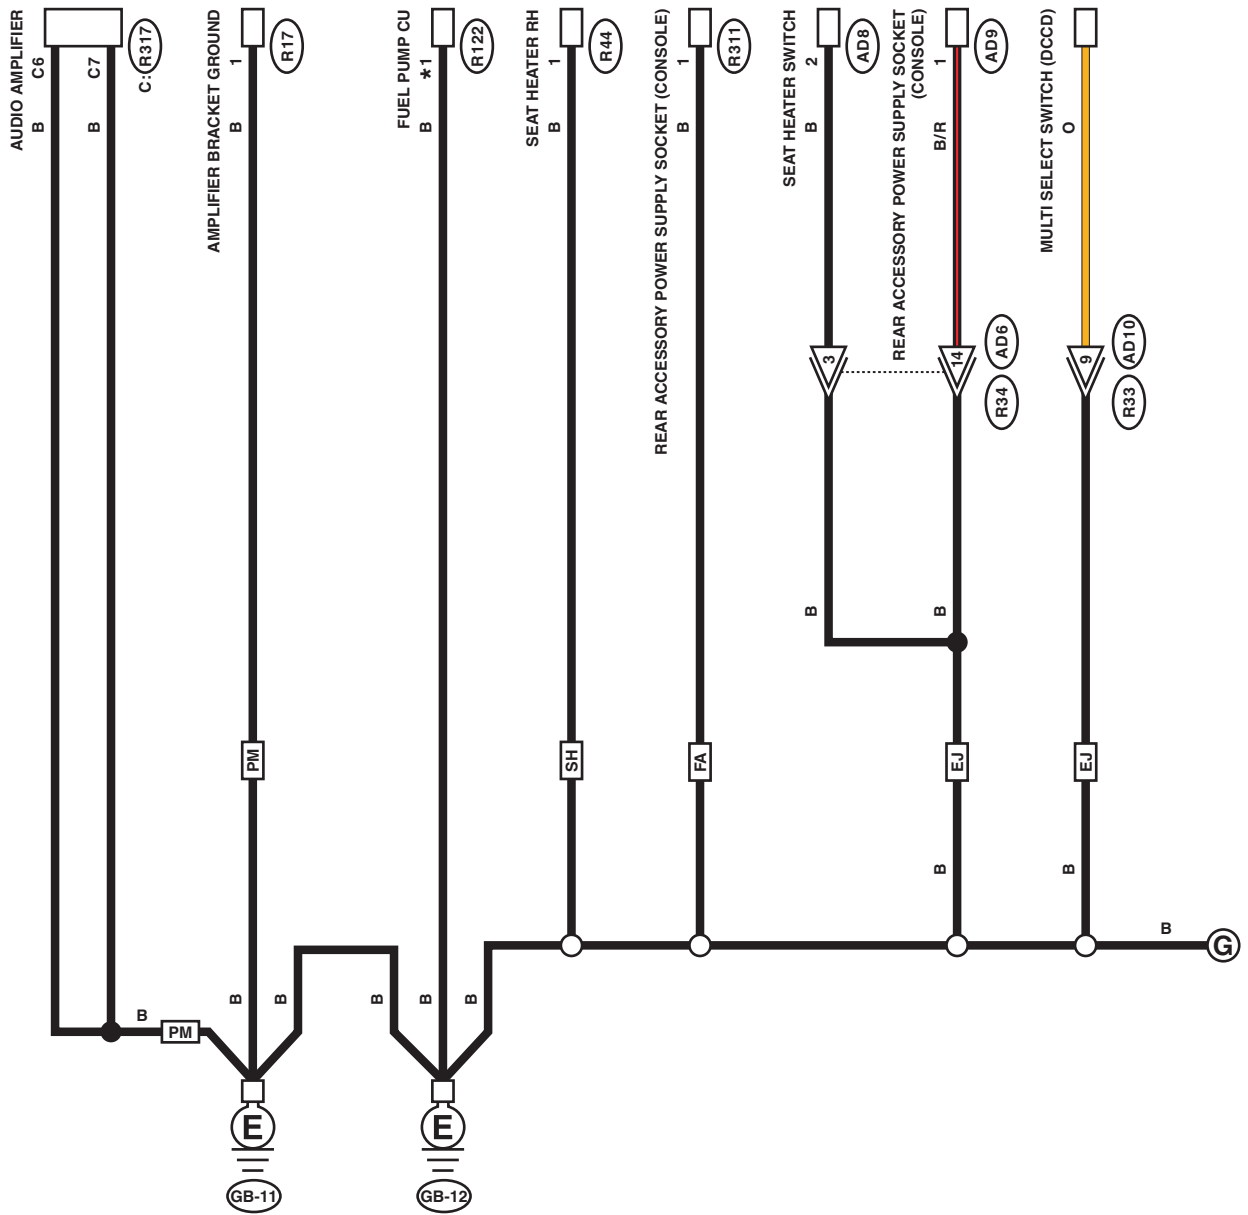

- PM** : PREMIUM MODEL
- SH** : WITH SEAT HEATER
- FA** : ENGINE TYPE FA
- EJ** : ENGINE TYPE EJ


*1 : ENGINE TYPE FA : 4
ENGINE TYPE EJ : 5

WI-44276

Ground Circuit

h

h

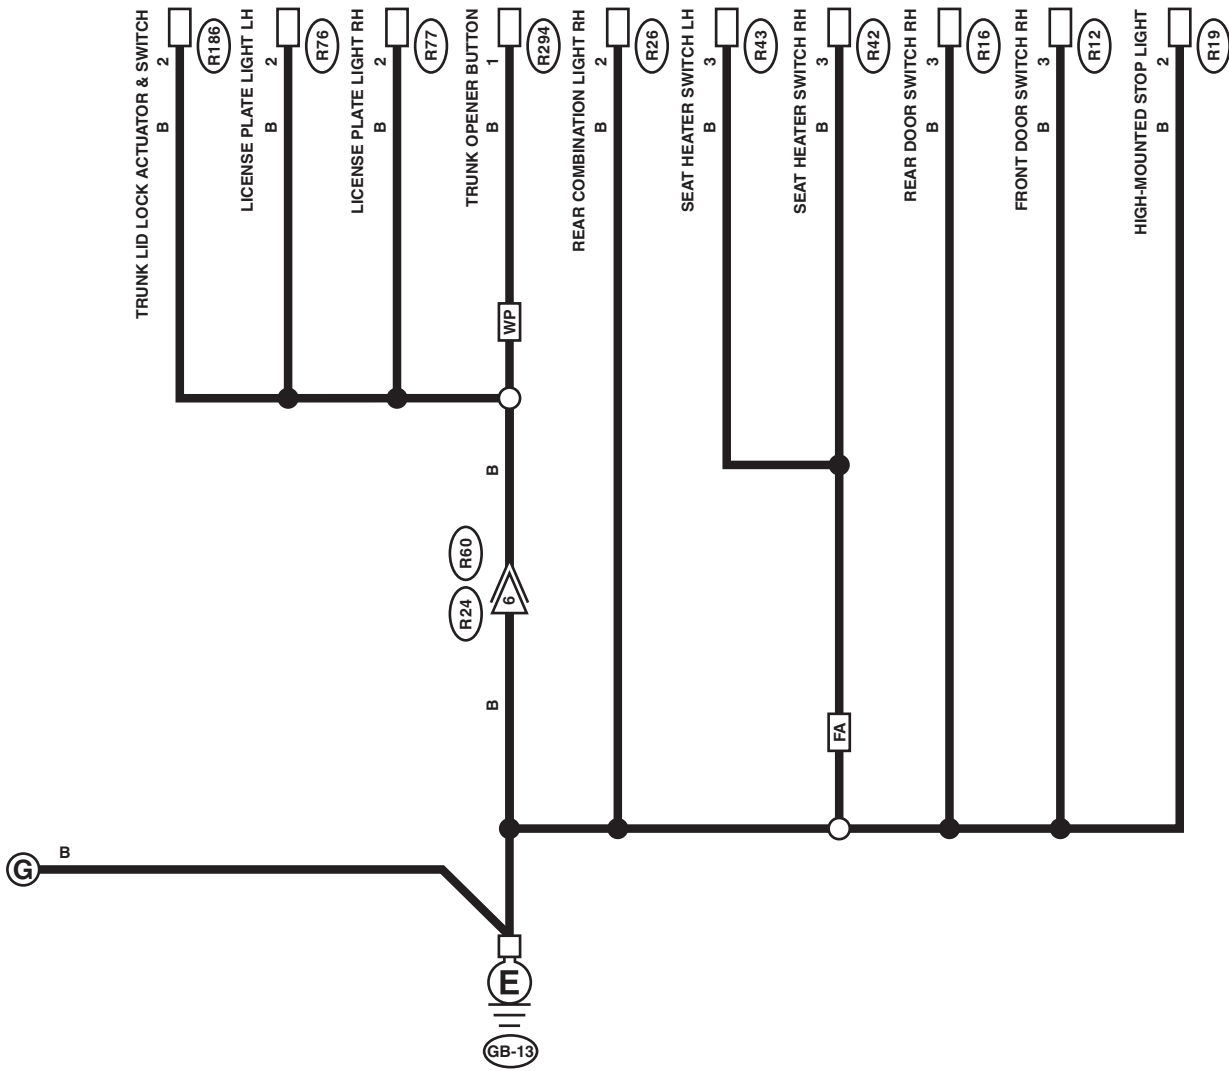


WP : WITH PUSH BUTTON START

FA : ENGINE TYPE FA

Ground Circuit

WIRING SYSTEM

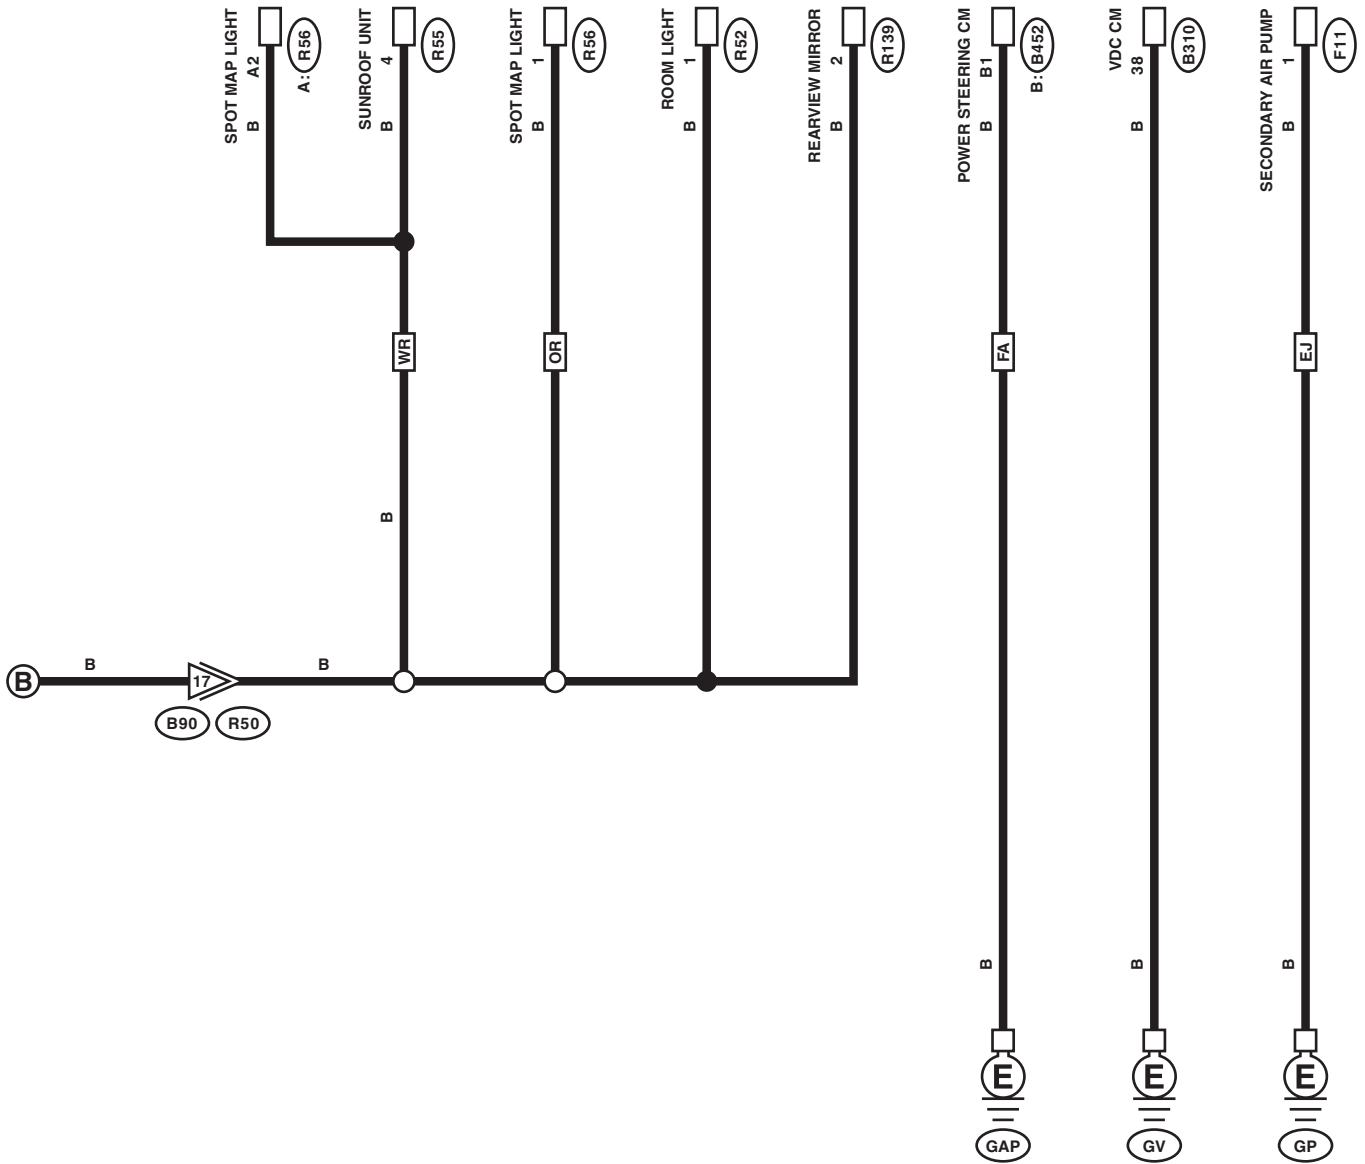


OR : WITHOUT SUNROOF
WR : WITH SUNROOF

FA : ENGINE TYPE FA
EJ : ENGINE TYPE EJ

WI-44278

Ground Circuit

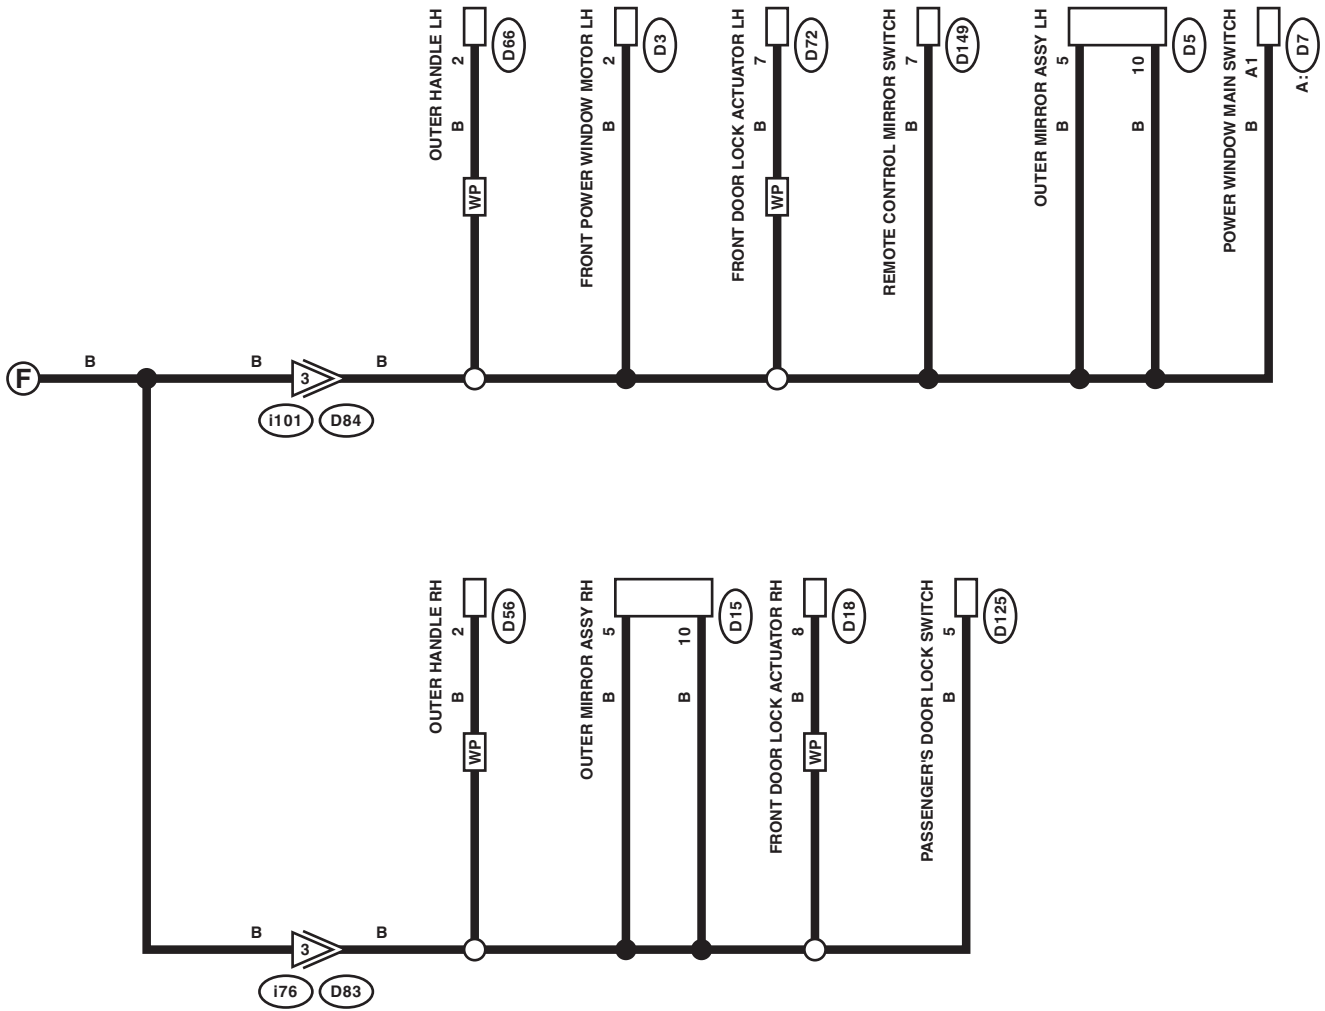

WP : WITH PUSH BUTTON START


Ground Circuit

WIRING SYSTEM

k

k

LIST OF CONNECTORS

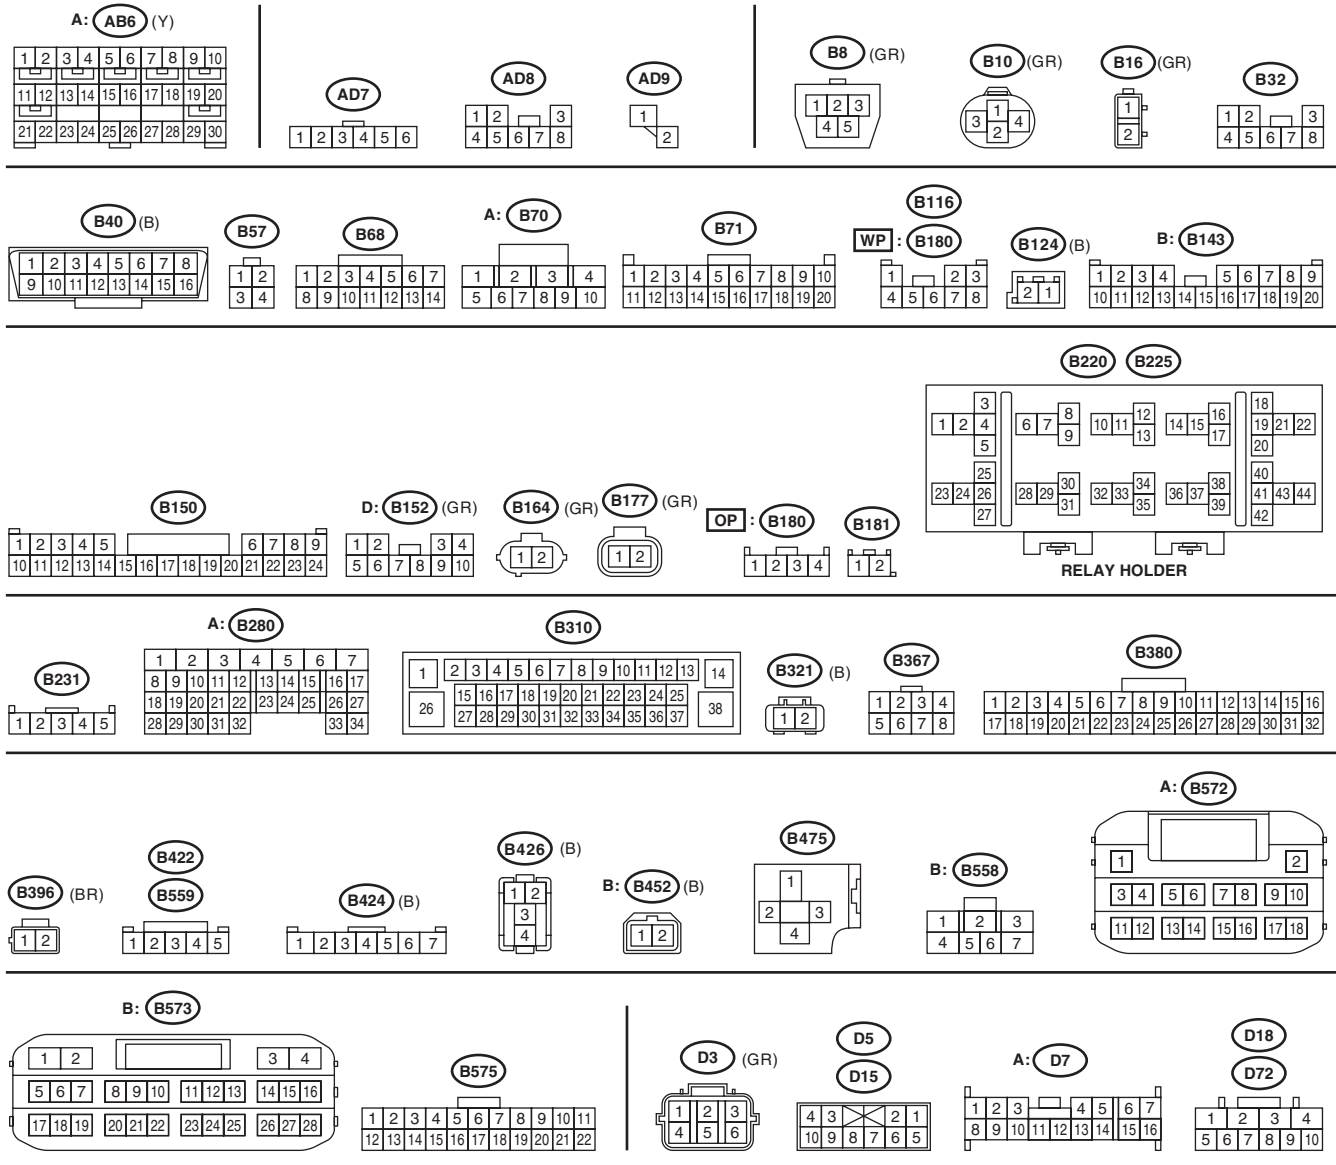


OP : WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START

WI-44280



LIST OF CONNECTORS

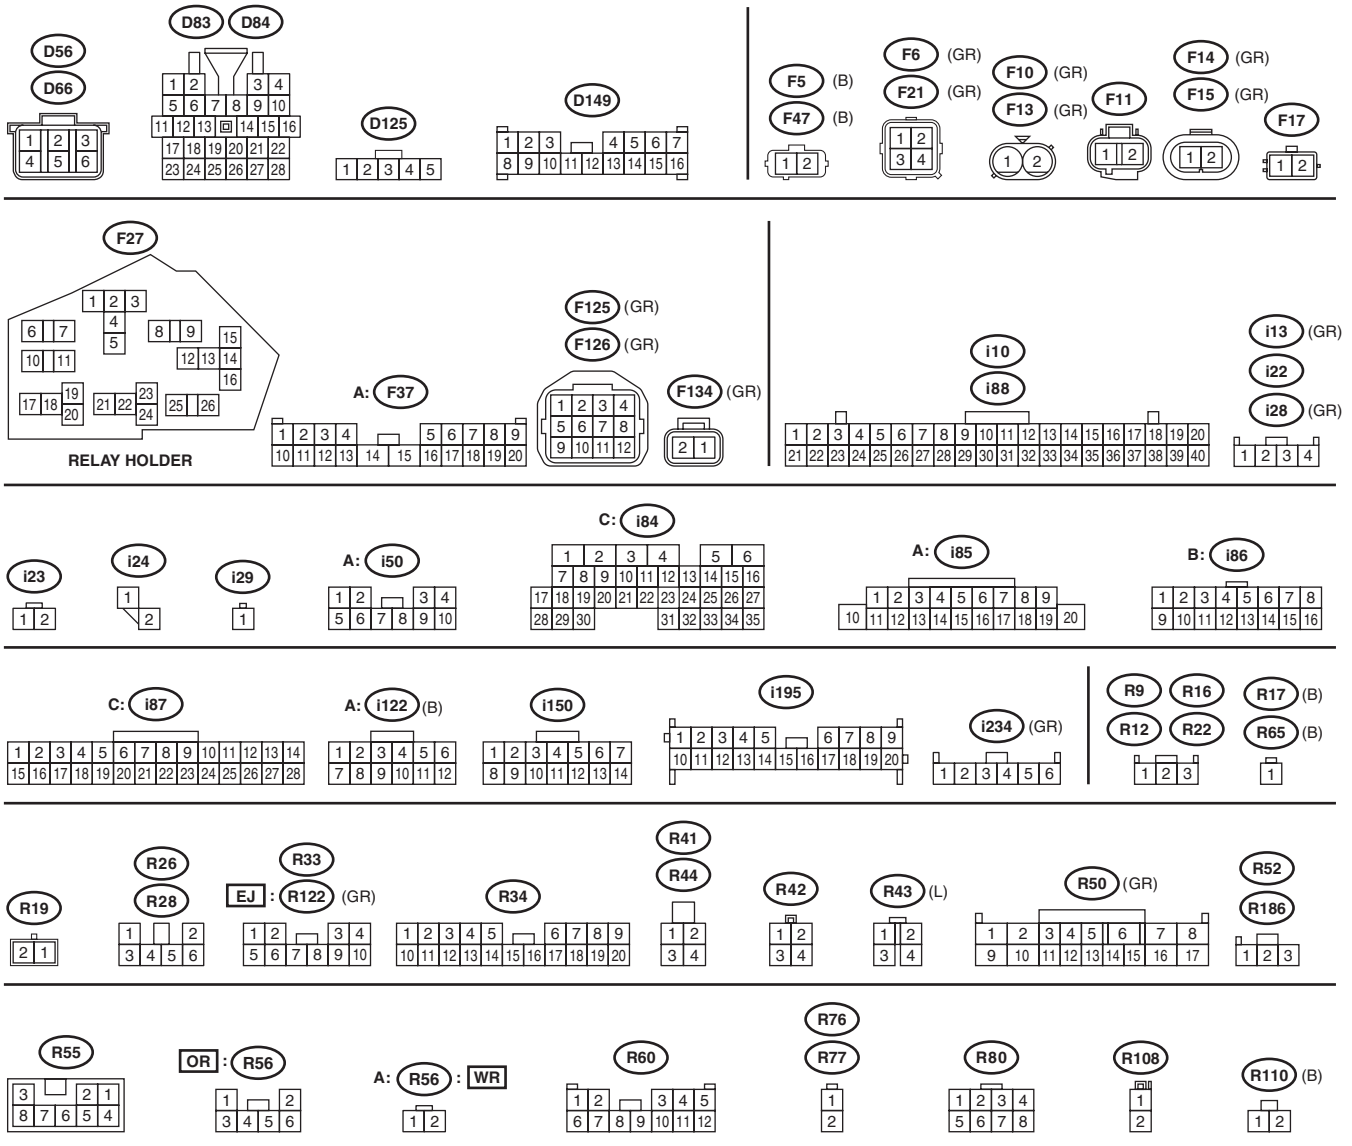

OR : WITHOUT SUNROOF

EJ : ENGINE TYPE EJ

WR : WITH SUNROOF


Ground Circuit

WIRING SYSTEM

m

m

LIST OF CONNECTORS

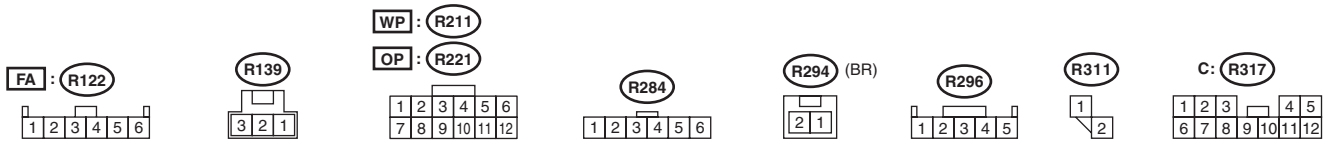

OP : WITHOUT PUSH BUTTON START

FA : ENGINE TYPE FA

WP : WITH PUSH BUTTON START

WI-44282