


60. Harness Components Location

A: LOCATION

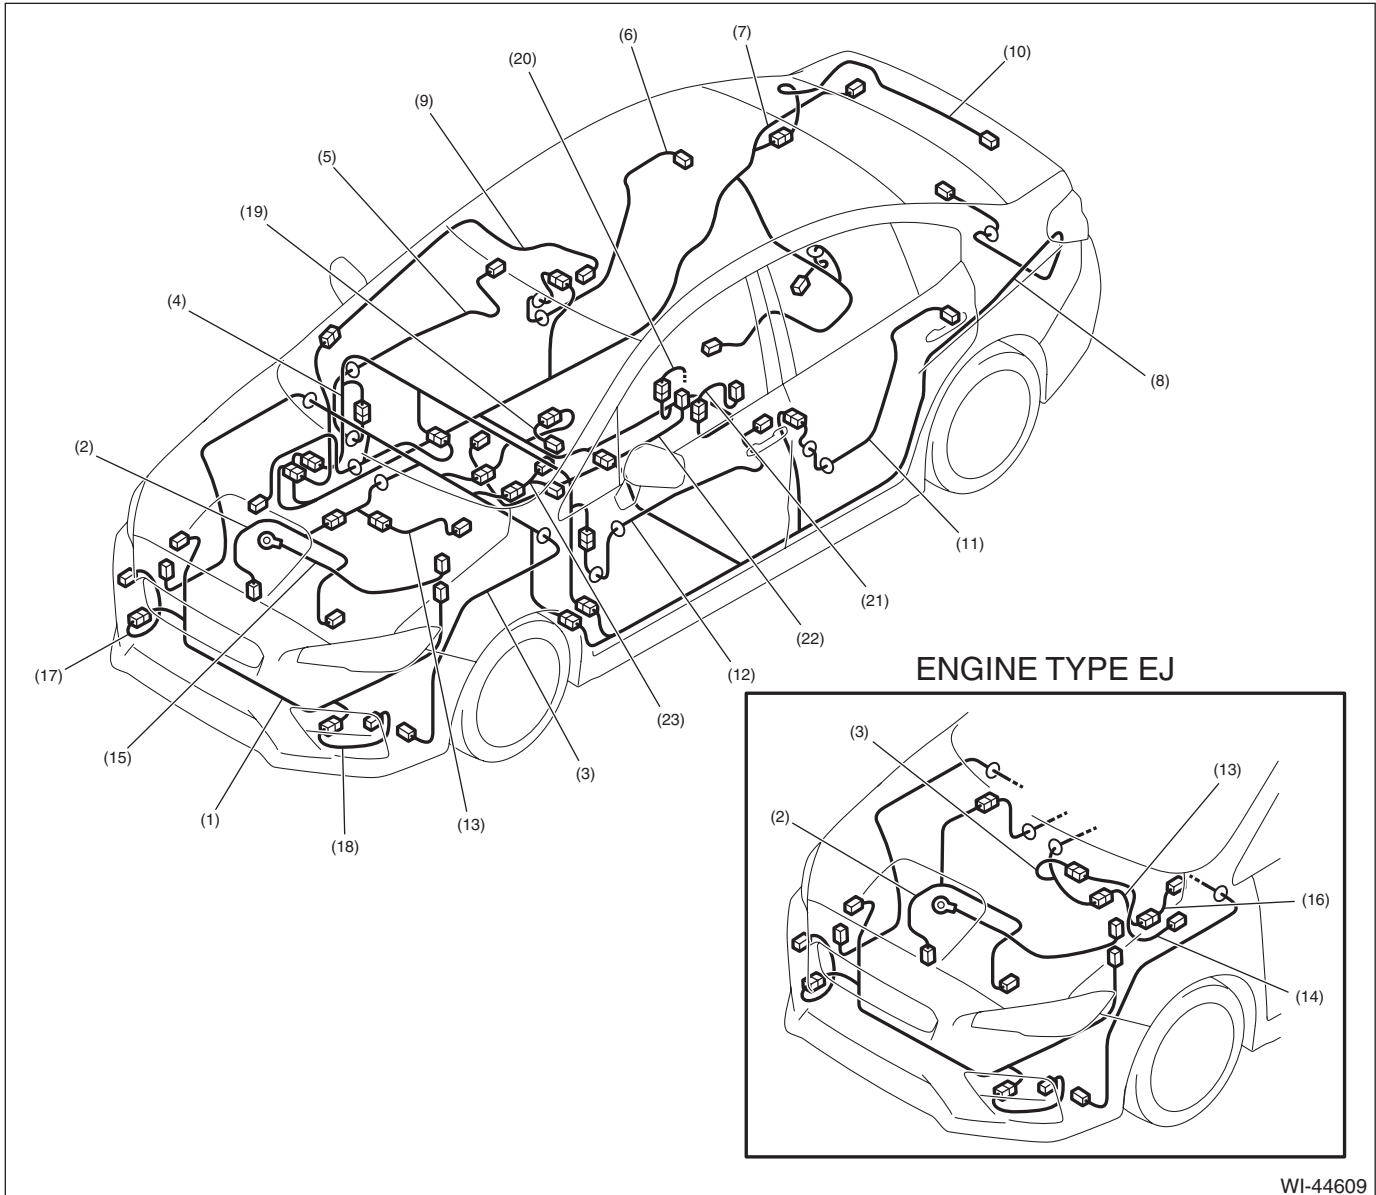

- | | | |
|-------------------------------------|---|---|
| (1) Front wiring harness | (9) Roof cord | (17) Bumper light cord RH |
| (2) Engine wiring harness | (10) Trunk lid cord | (18) Bumper light cord LH |
| (3) Bulkhead wiring harness | (11) Rear door cord LH | (19) Occupant detection wiring harness |
| (4) Instrument panel wiring harness | (12) Front door cord LH | (20) Adapter cord RH |
| (5) Front door cord RH | (13) Transmission cord | (21) Adapter cord LH |
| (6) Rear door cord RH | (14) Rear oxygen sensor cord | (22) AUX adapter cord |
| (7) Rear wiring harness RH | (15) Generator cord | (23) Keyless access interior antenna adapter cord |
| (8) Rear wiring harness LH | (16) Center differential wiring harness | |