

Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM

63. Bulkhead Wiring Harness (In Engine Compartment) LH

A: LOCATION


1. ENGINE TYPE FA

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Y	C-2		Front sub sensor LH
B8	5	GR	A-4		Front wiper motor
B9	2	B	C-3		Battery sensor
B10	4	GR	C-3		Pressure switch
B15	2	GR	B-3		Front ABS wheel speed sensor LH
B16	2	GR	B-3		Brake fluid level switch
B143	20	★	B-3		M/B
B144	9	BR	B-3		
B145	7	BR	B-3		
B146	2	B	D-3		Front washer motor
B186	8	★	B-3		M/B
B360	16	GR	B-3	F109	Through joint connector
B361	14	GR	B-3	F108	
B396	2	BR	C-3		Washer fluid level sensor
B564	17	★	B-3		Relay holder
B565	3	B	B-3		Brake booster pressure sensor
B571	2	★	B-3		M/B

★ : White or natural color

Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM

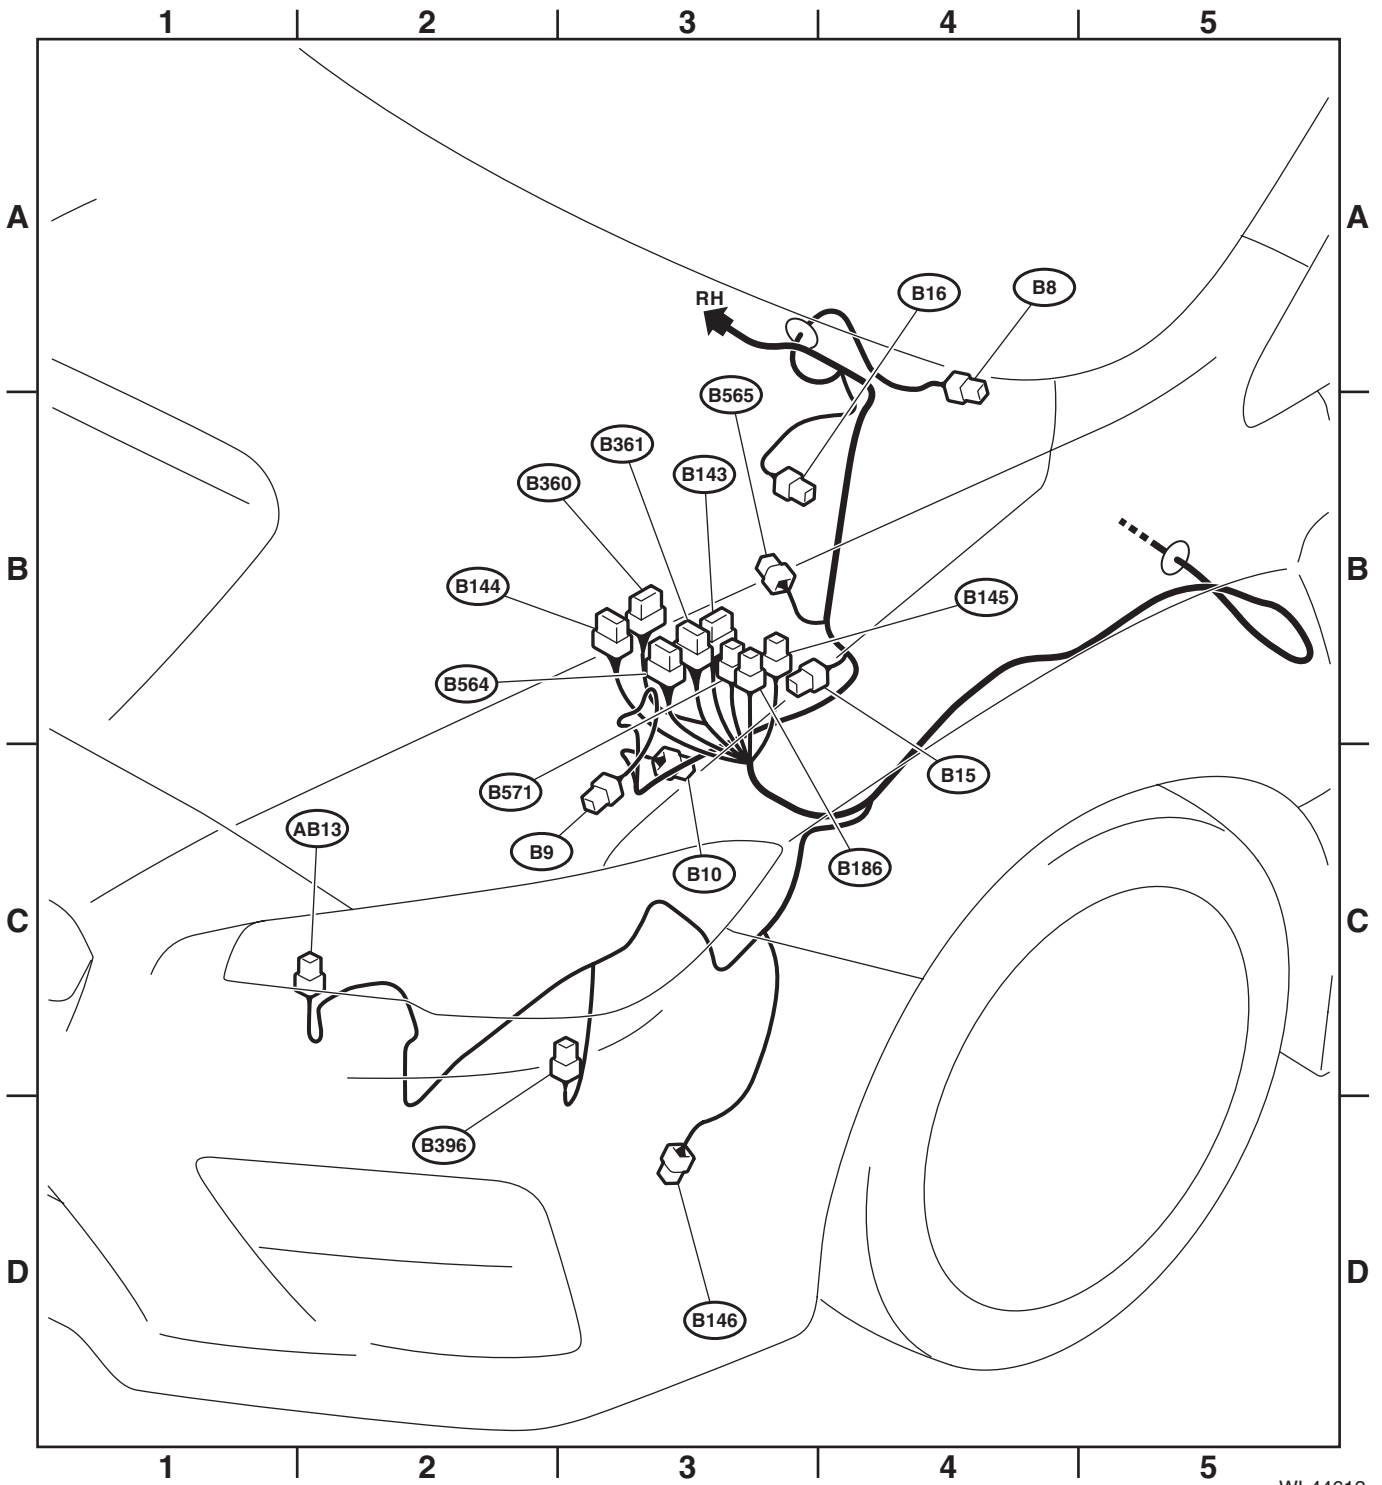

WI-44613

Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM


2. ENGINE TYPE EJ

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Y	C-2		Front sub sensor LH
B8	5	GR	A-4		Front wiper motor
B10	4	GR	C-3		Pressure switch
B15	2	GR	B-3		Front ABS wheel speed sensor LH
B16	2	GR	B-3		Brake fluid level switch
B143	20	★	B-3		M/B
B144	9	BR	B-3		
B145	7	BR	B-3		
B146	2	B	D-3		Front washer motor
B186	8	★	B-3		M/B
B360	16	GR	B-3	F109	Through joint connector
B361	14	GR	B-3	F108	
B396	2	BR	C-3		Washer fluid level sensor
B571	2	★	B-3		M/B

★ : White or natural color

Bulkhead Wiring Harness (In Engine Compartment) LH

WIRING SYSTEM

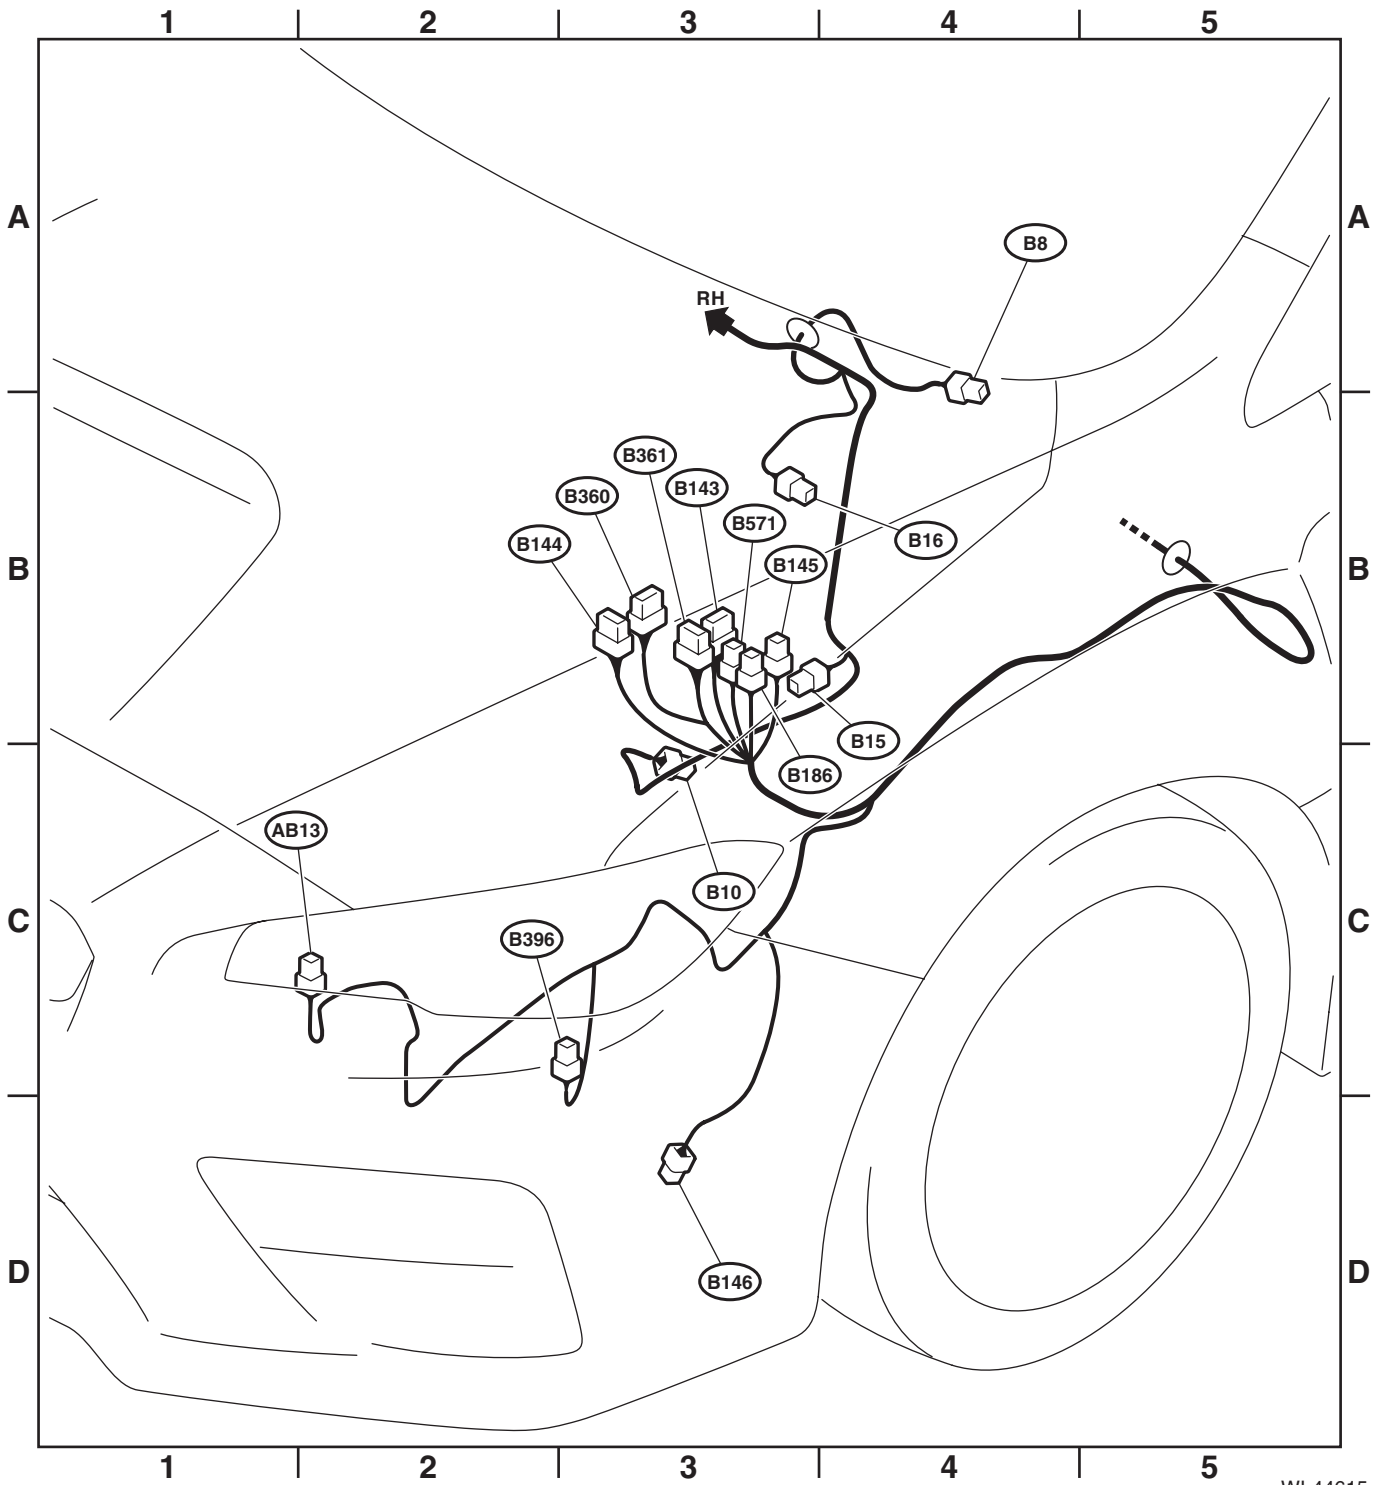

WI-44615