

# General Description

INSTRUMENTATION/DRIVER INFO (DIAGNOSTICS)

## 3. General Description

### A: CAUTION

#### 1. AIRBAG SYSTEM

##### CAUTION:

- Do not use the electrical test equipment on the airbag system wiring harnesses and connector circuits.
- Be careful not to damage the airbag system wiring harness.

### B: INSPECTION

Before performing the diagnosis, check the following items which may cause problems relating the wiper or light.

1) Measure the battery voltage and check electrolyte.

**Standard voltage: 12 V or more**

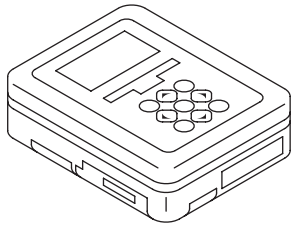
**Specific gravity: 1.260 or more**

2) Check the fuse condition.

3) Check the connecting condition of harness and harness connector.

### C: PREPARATION TOOL

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

#### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.