


# Panel Replacement

## 7-10. Rear Wheel Apron (partial replacement)

### A: REMOVAL

• Overall view (LH) (Rear quarter outer removal condition)

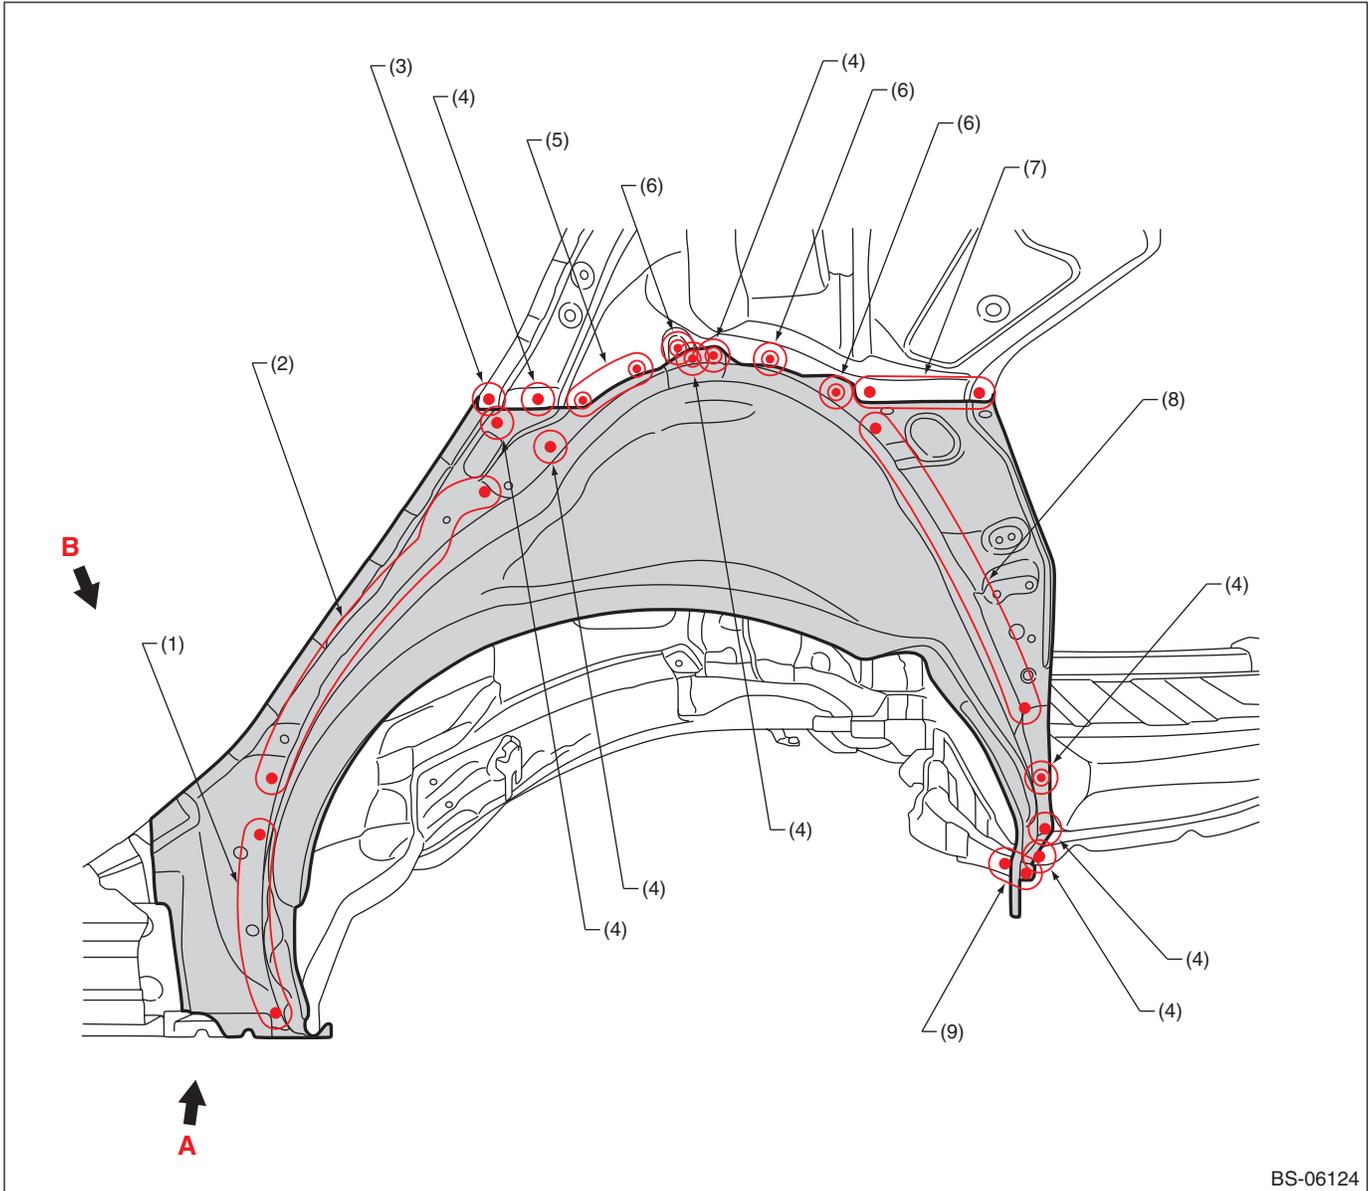

BS-06124


- (1) 4 points (outside · 1)
- (2) 8 points (outside · 1)
- (3) 1 point (inside · 1)

- (4) 1 point (outside · 1)
- (5) 2 points (outside · 2)
- (6) 1 point (outside · 2)

- (7) 3 points (inside · 1)
- (8) 7 points (outside · 1)
- (9) 3 points (outside · 1)

# Panel Replacement

• (RH)

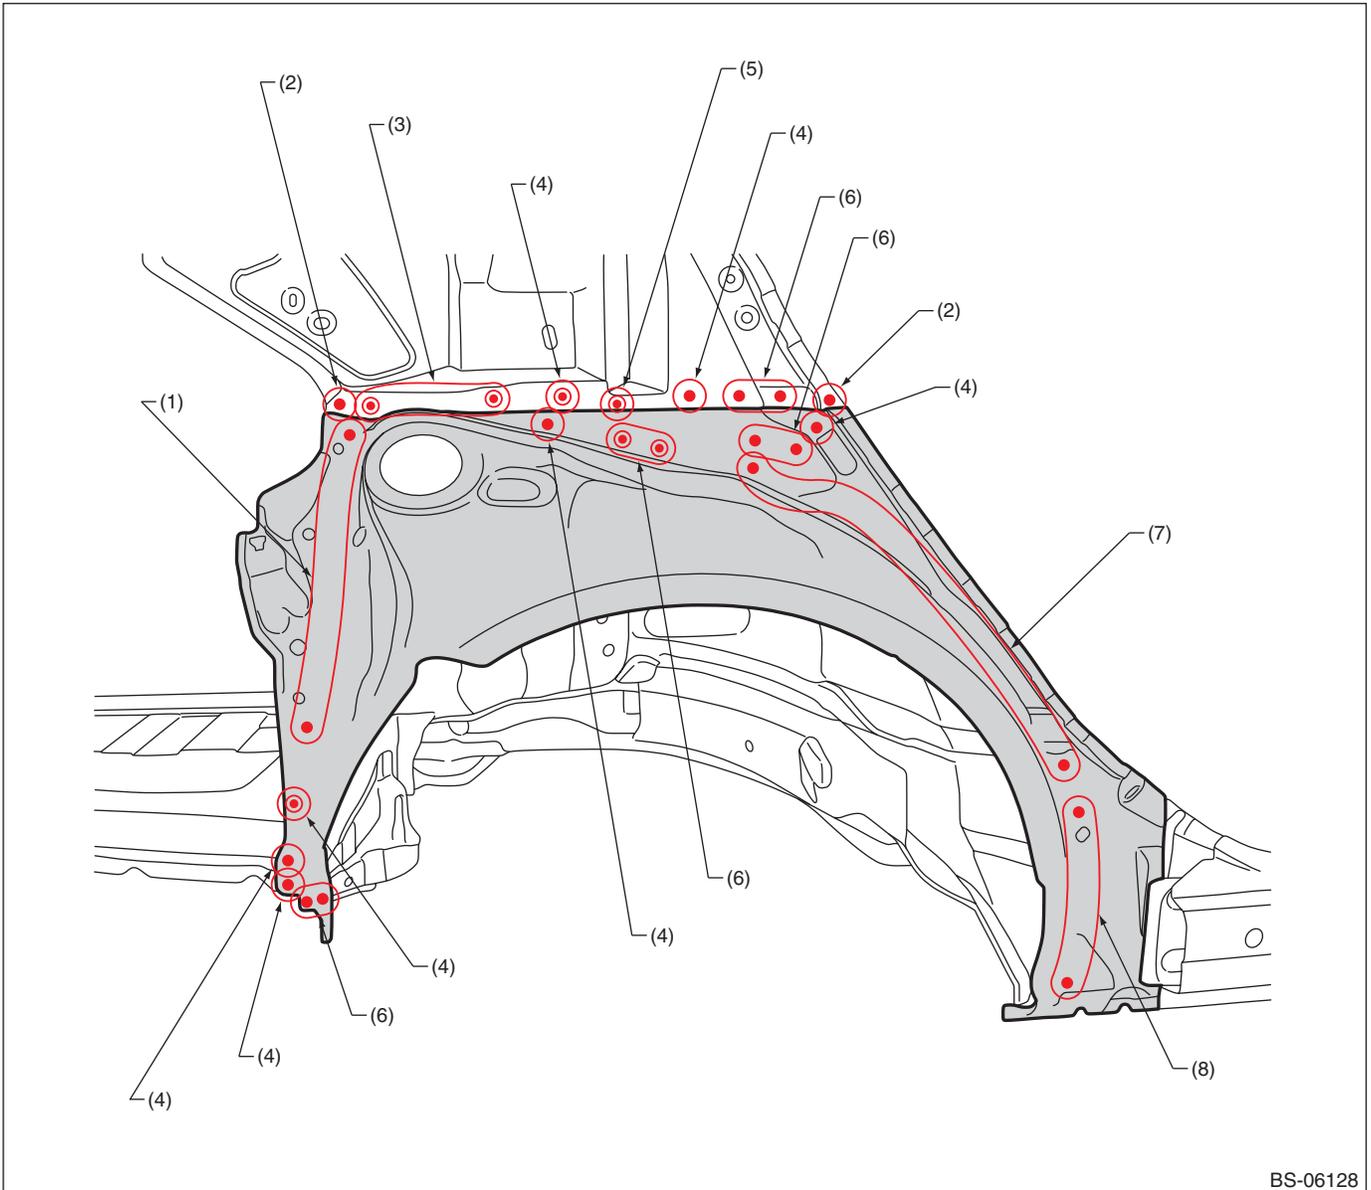

BS-06128


- (1) 6 points (outside · 1)
- (2) 1 point (inside · 1)
- (3) 3 points (outside · 2)

- (4) 1 point (outside · 1)
- (5) 1 point (outside · 2)
- (6) 2 points (outside · 1)

- (7) 10 points (outside · 1)
- (8) 4 points (outside · 1)

# Panel Replacement

• LH

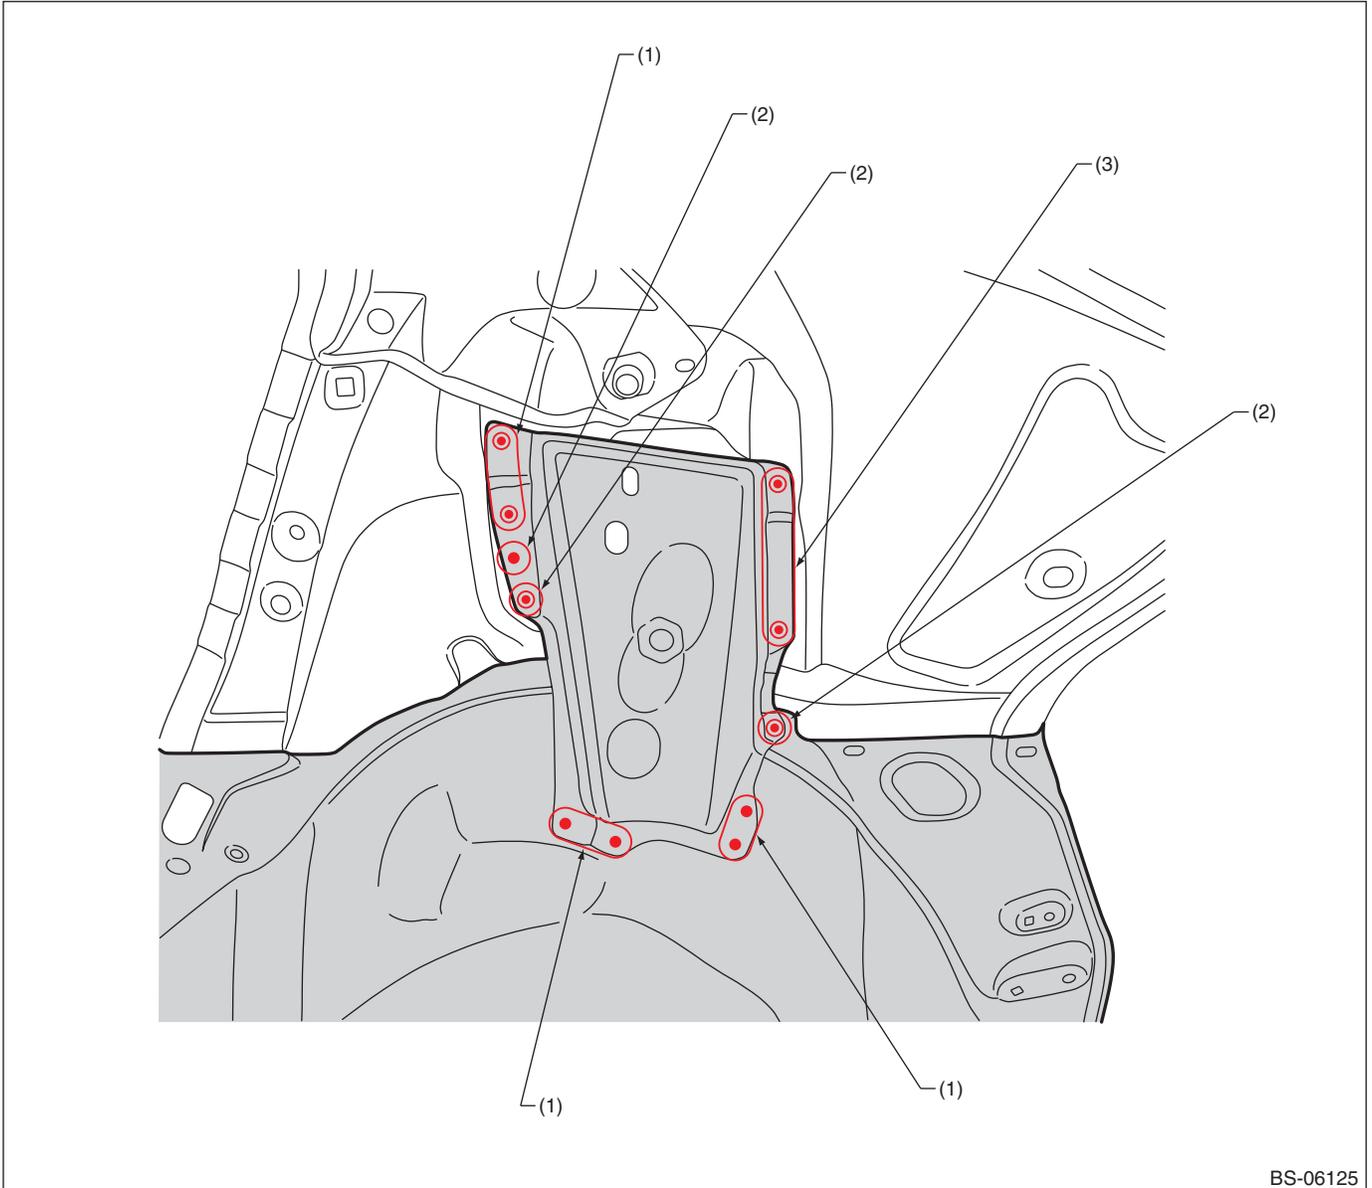


(1) 2 points (outside · 1)

(2) 1 point (outside · 1)

(3) 3 points (outside · 1)

# Panel Replacement

• RH

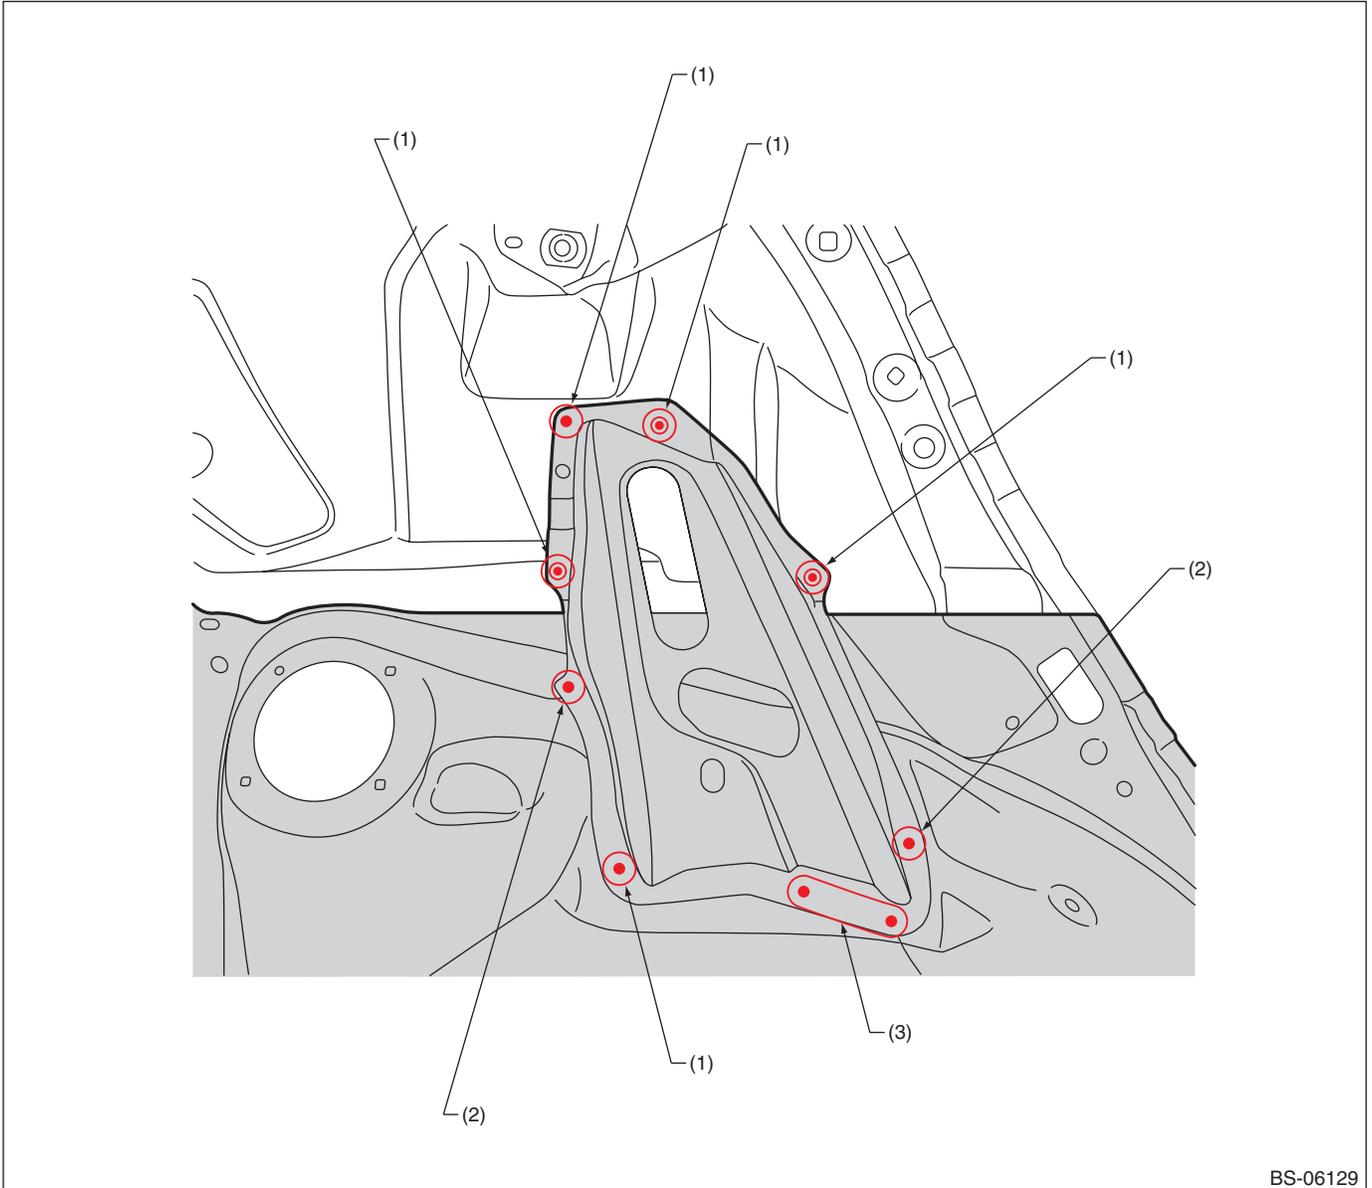


BS-06129

(1) 1 point (outside · 1)

(2) 1 point (top · 1)

(3) 2 points (outside · 1)

# Panel Replacement

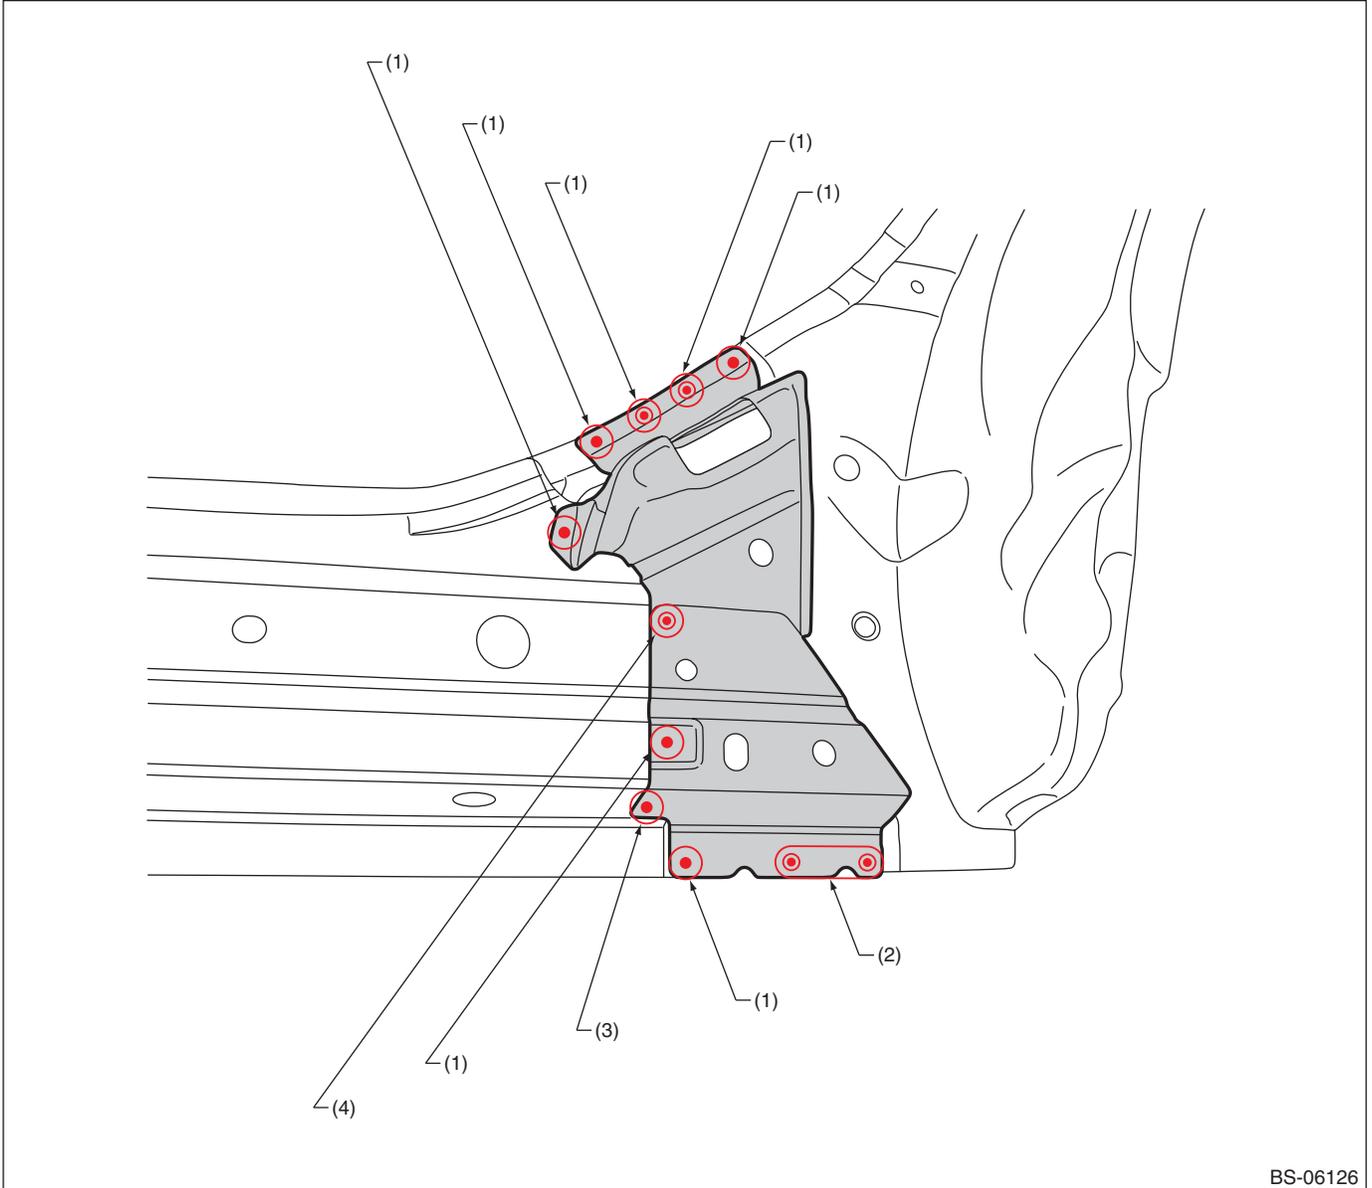

BS-06126


(1) 1 point (outside · 1)  
(2) 2 points (outside · 1)

(3) 1 point (bottom · 1)

(4) 1 point (outside · 2)

# Panel Replacement

## • Views

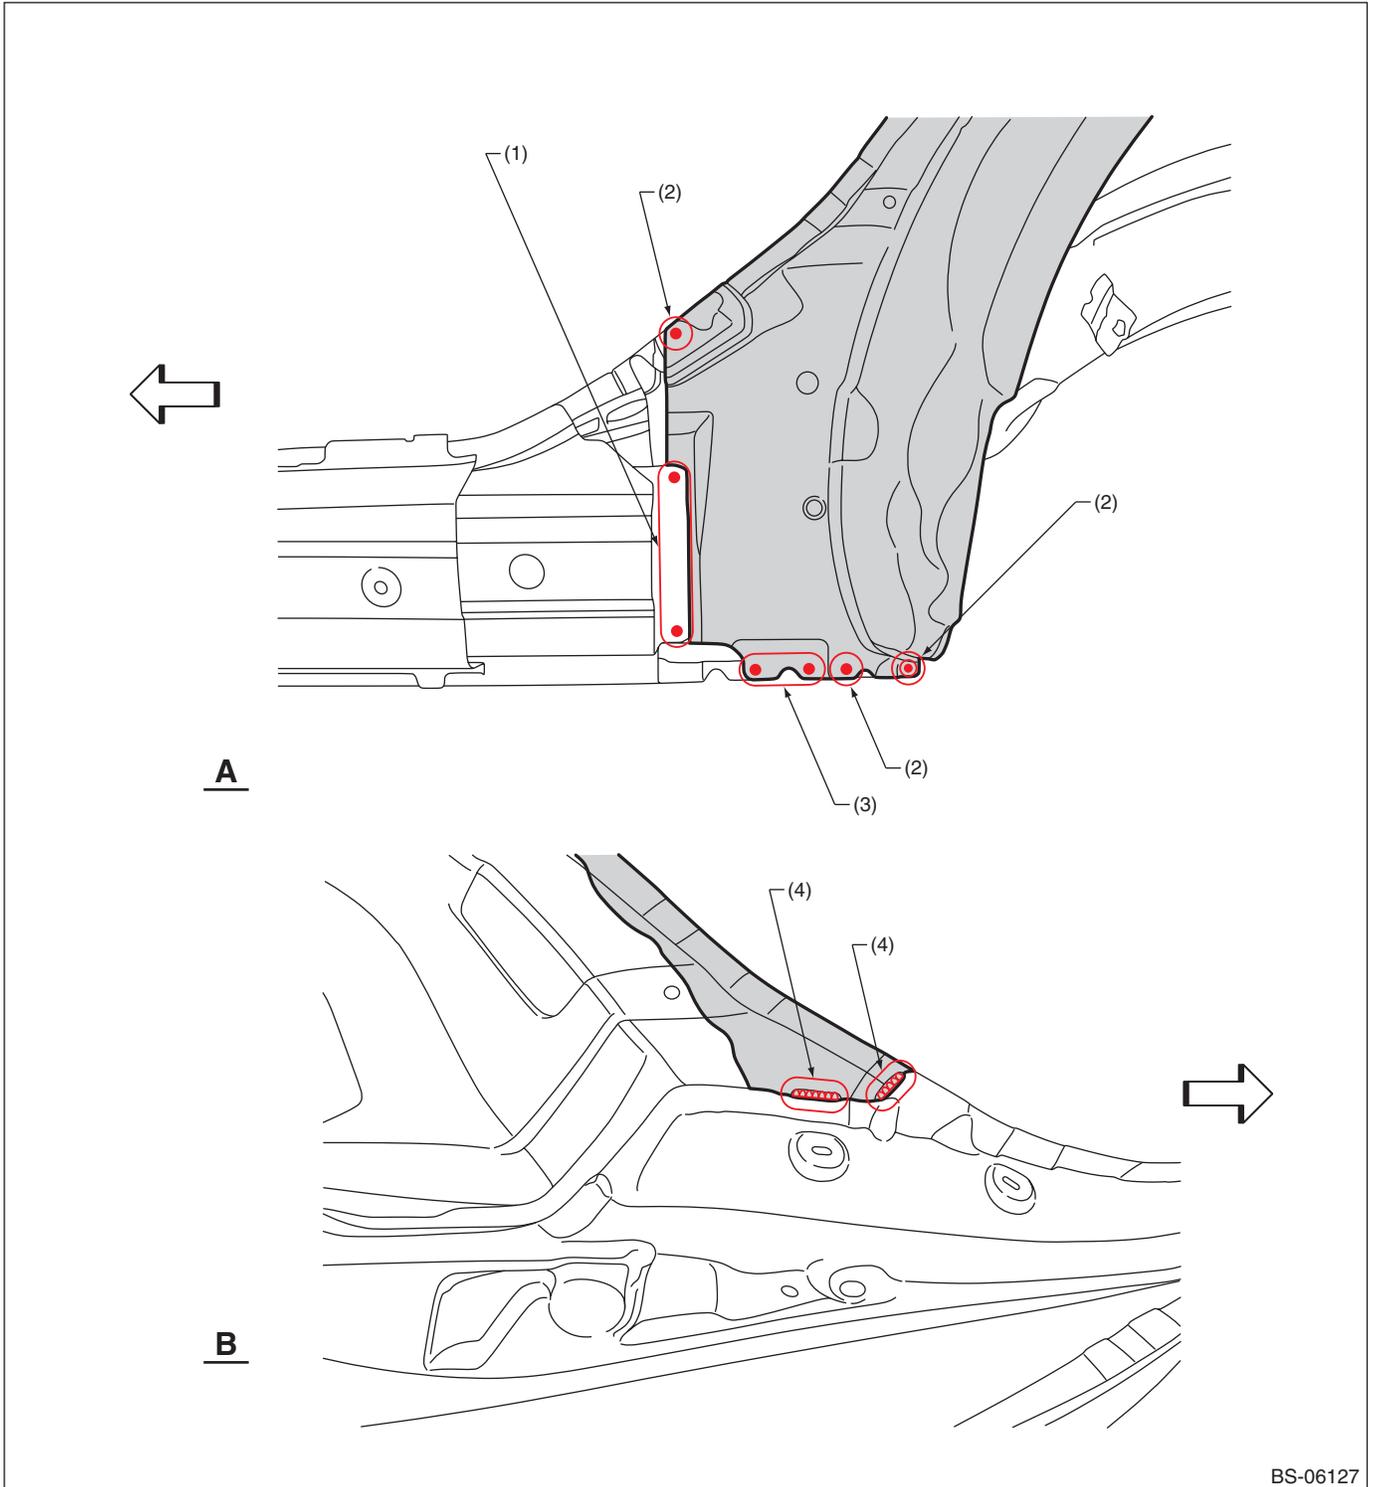

BS-06127

(1) 3 points (outside · 1)

(3) 2 points (outside · 1)

(4) 1 point (inside · 1, belt sander)

(2) 1 point (outside · 1)