


# Panel Replacement

## 7-11. Rear Quarter Inner (total replacement)

### A: REMOVAL

- Overall view (Rear quarter outer, rear skirt, rear side frame upper rear and floor side removal condition)

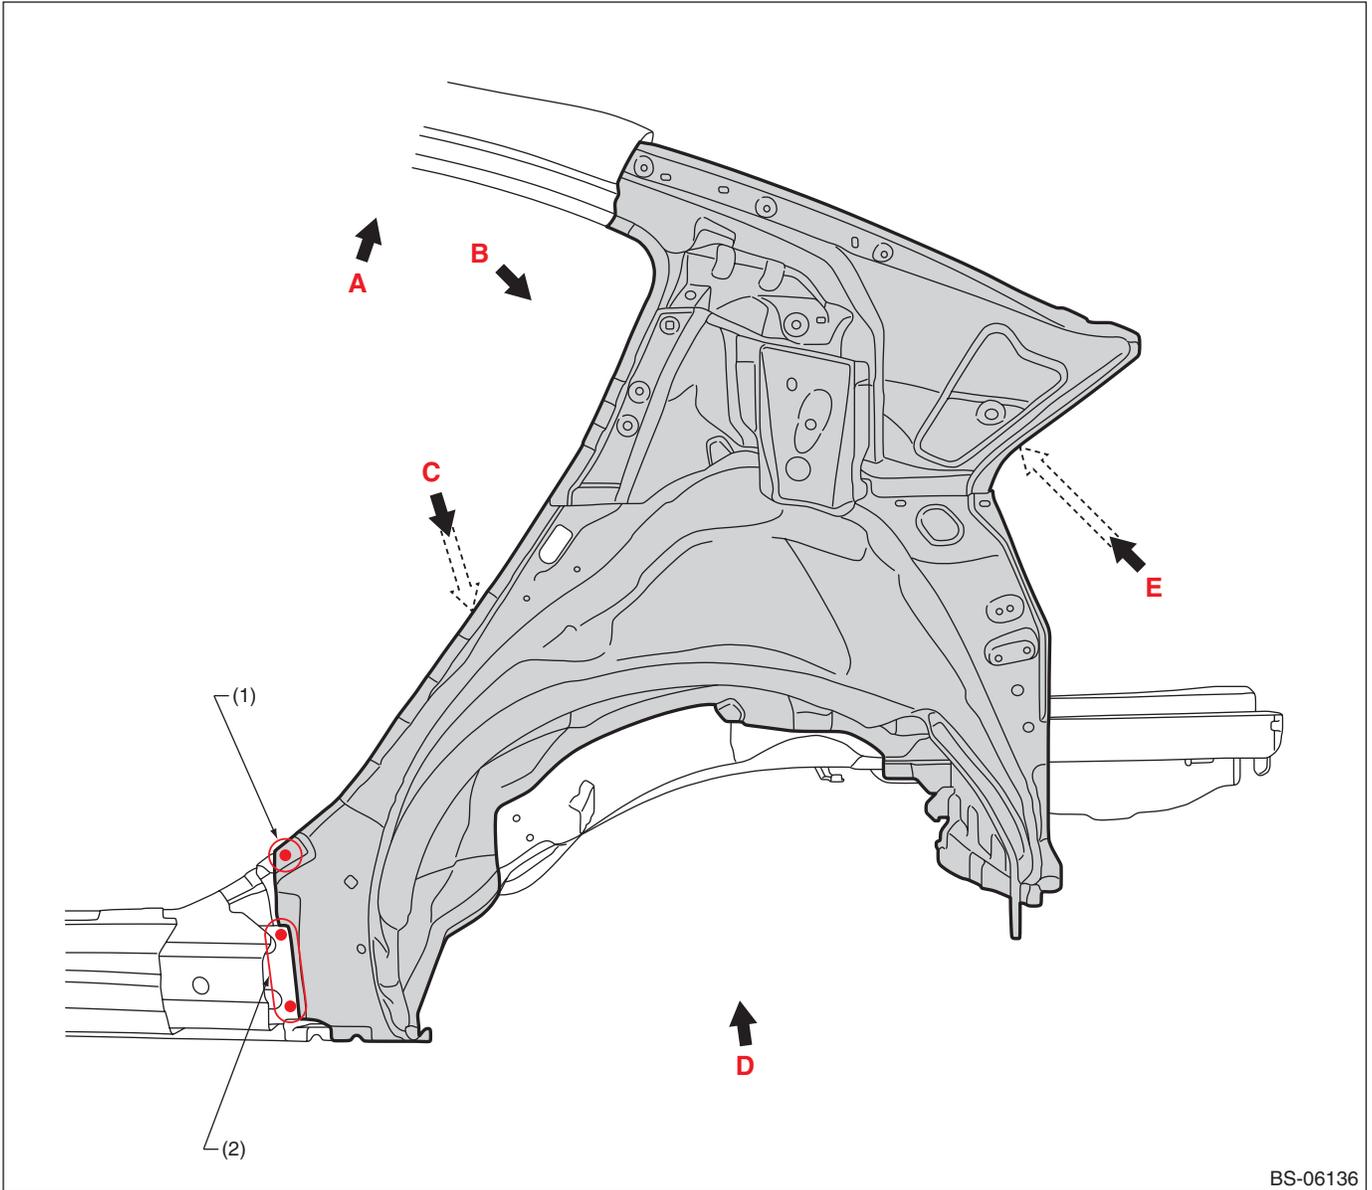


BS-06136

(1) 1 point (outside - 1)

(2) 3 points (outside - 1)

# Panel Replacement

## • Views 1

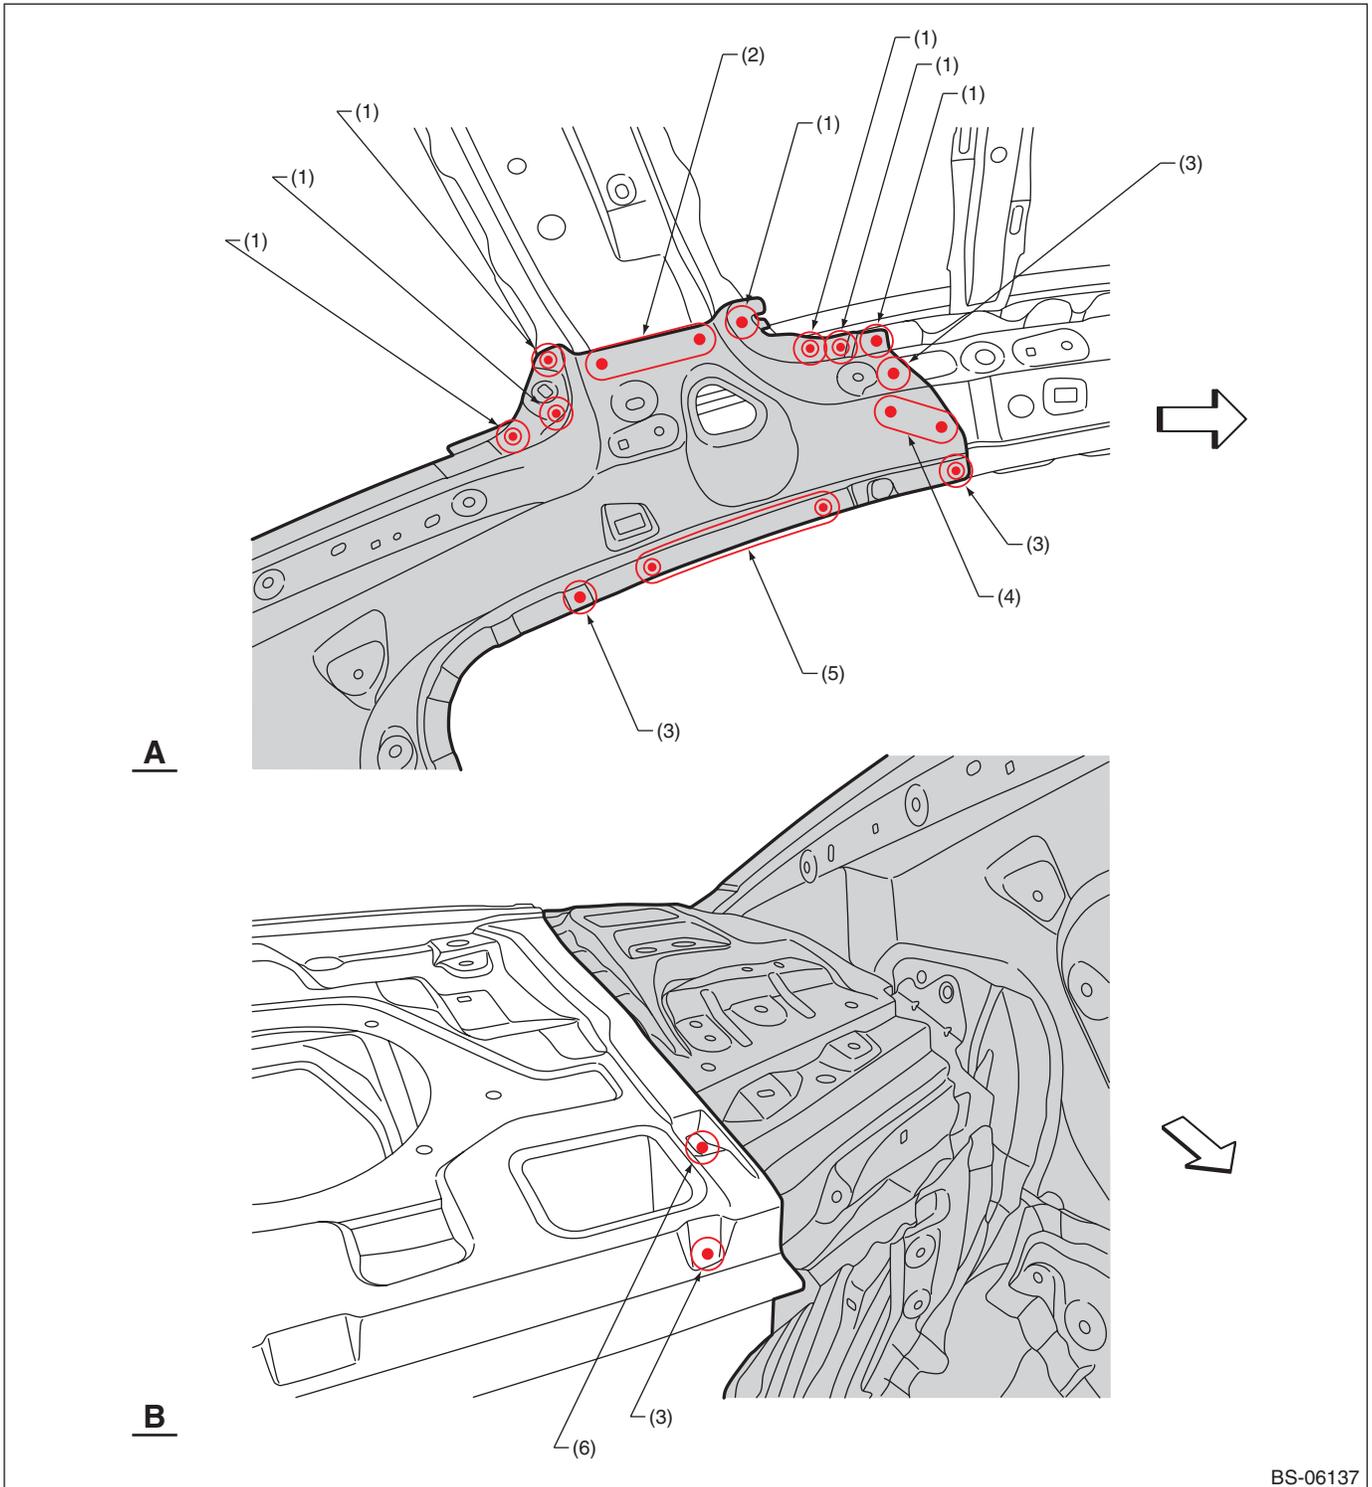

BS-06137


(1) 1 point (bottom · 1)  
(2) 3 points (bottom · 1)

(3) 1 point (inside · 1)  
(4) 2 points (inside · 1)

(5) 3 points (inside · 1)  
(6) 1 point (top · 1)

# Panel Replacement

## • Views 2

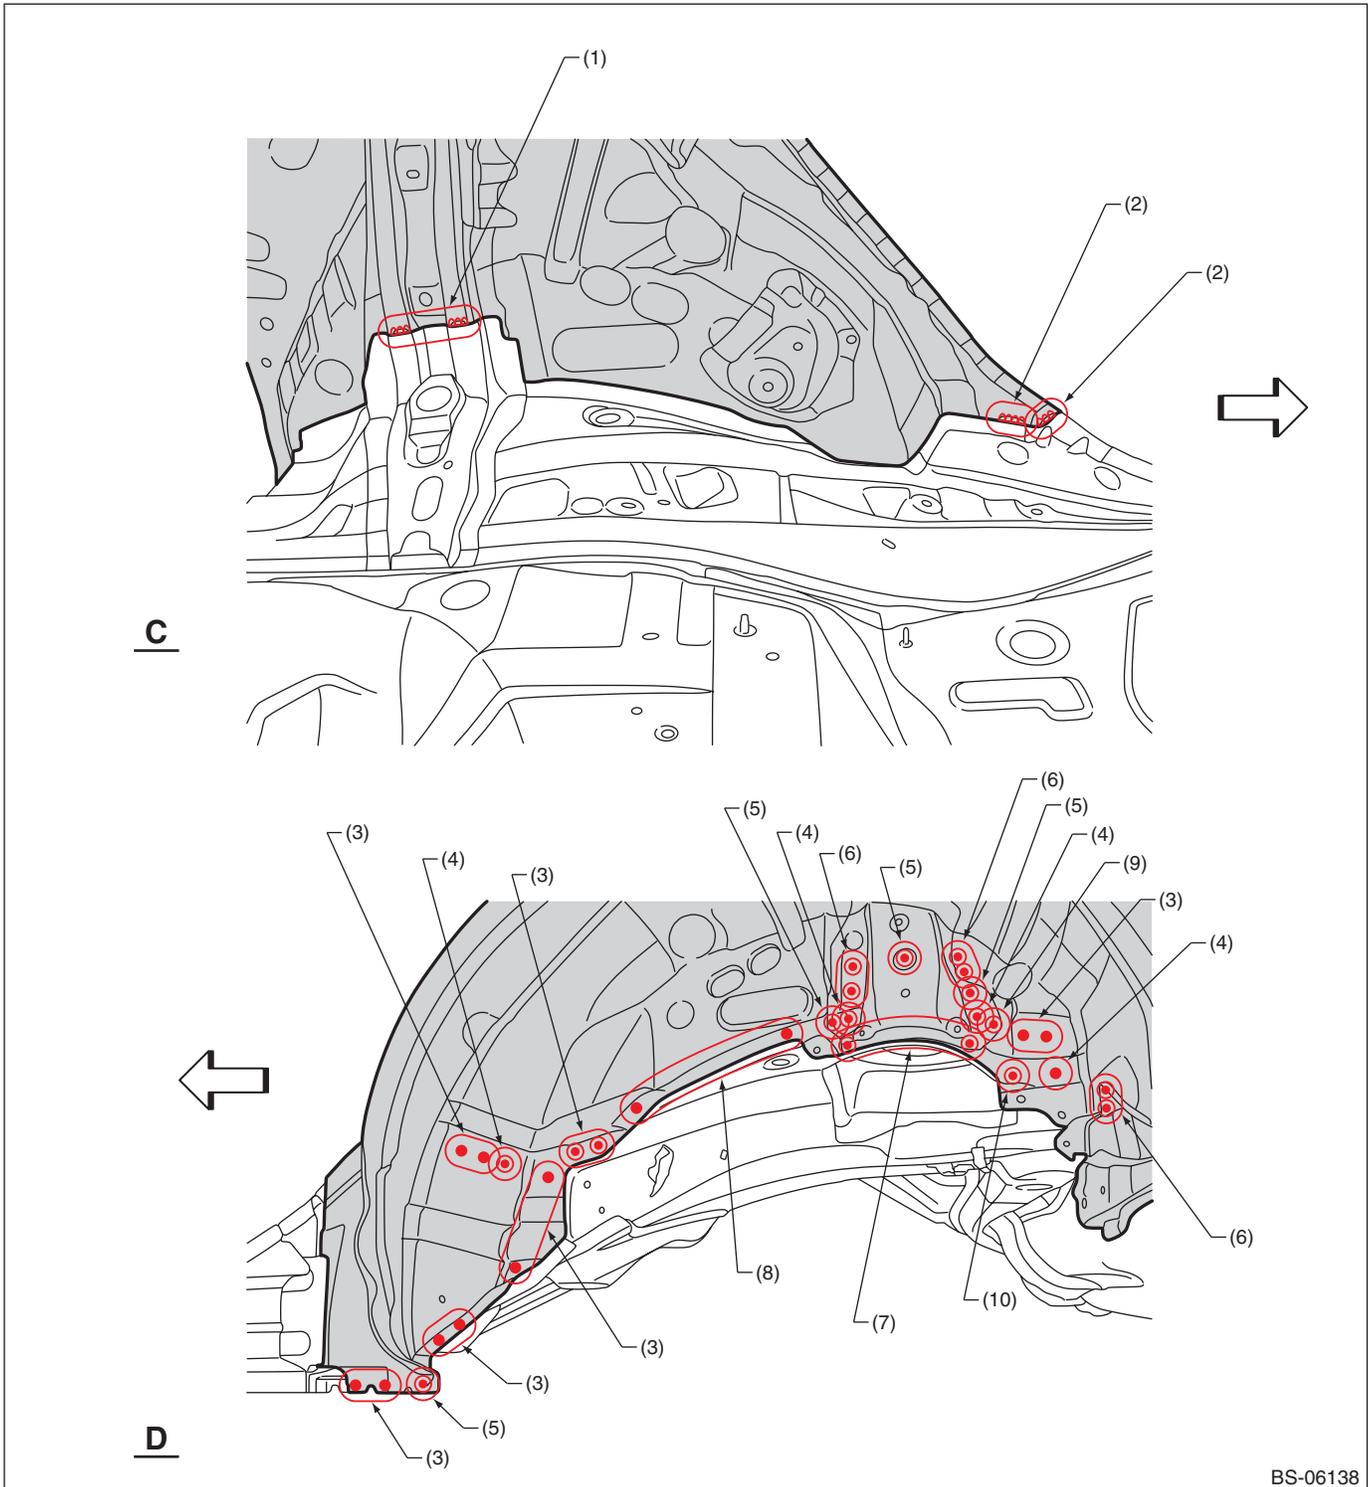


BS-06138

- |  |                            |                                      |
|--|----------------------------|--------------------------------------|
| (1) 2 points (inside · 1, belt sander) | (5) 1 point (outside · 2)  | (9) 1 point (outside · 2) (only LH)  |
| (2) 1 point (inside · 1, belt sander)  | (6) 2 points (outside · 2) | (10) 1 point (outside · 1) (only LH) |
| (3) 2 points (outside · 1)             | (7) 5 points (outside · 2) |                                      |
| (4) 1 point (outside · 1)              | (8) 5 points (outside · 1) |                                      |

# Panel Replacement

## • Views 3

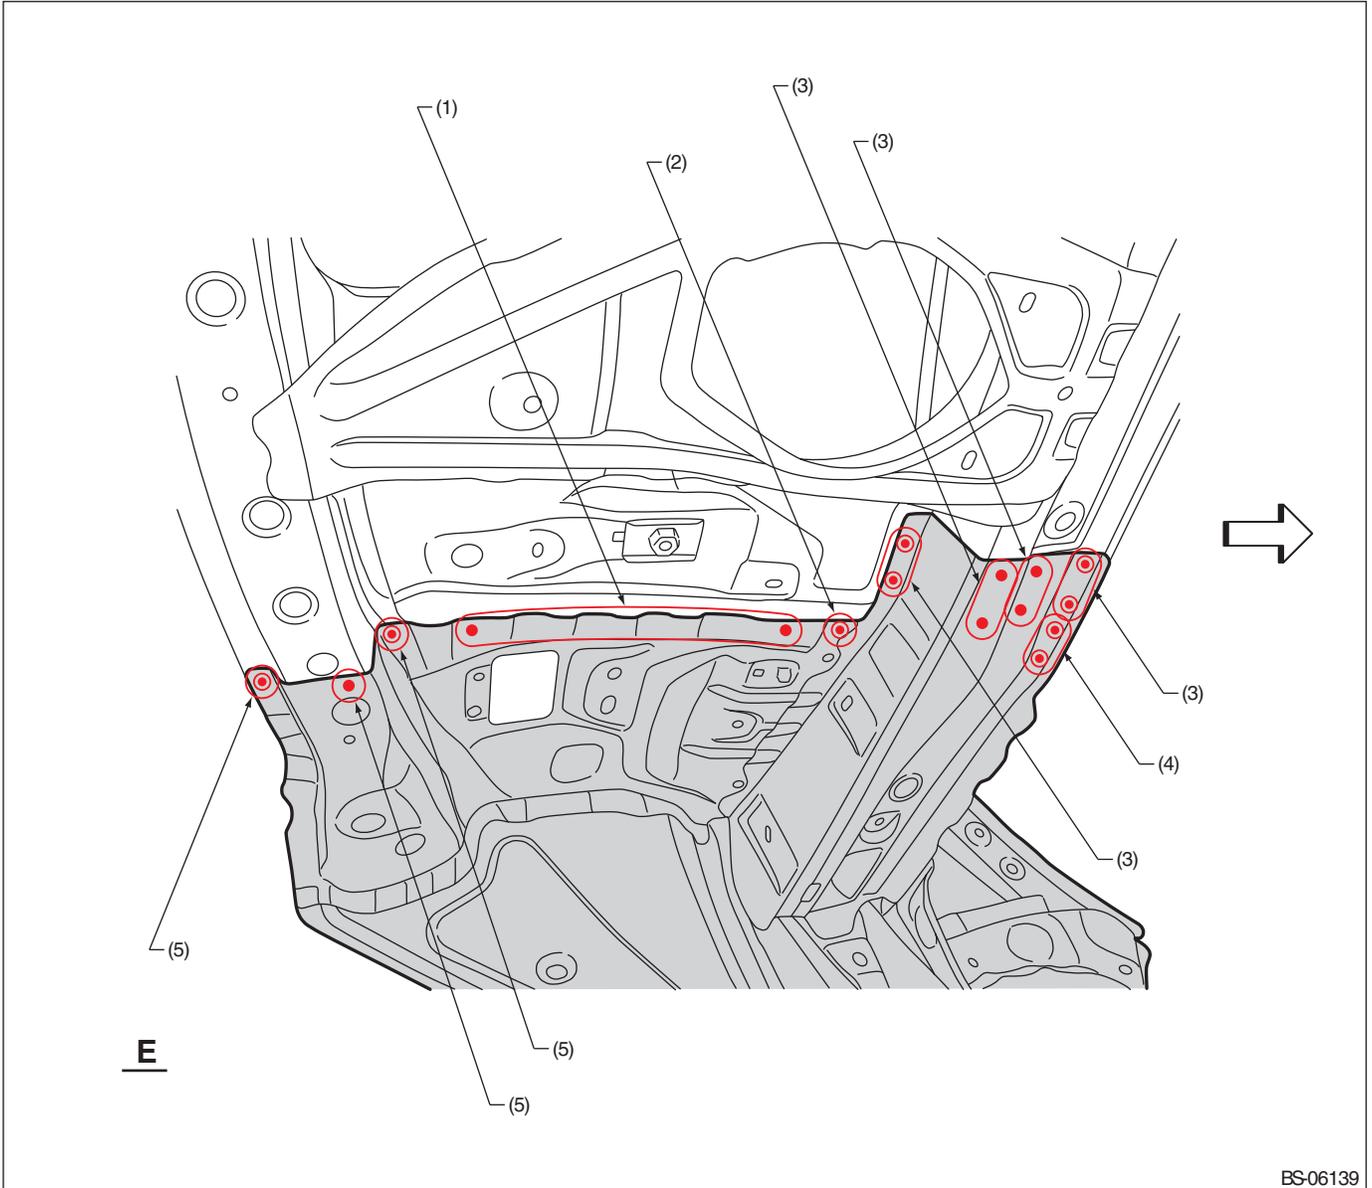

BS06139

(1) 6 points (bottom · 1)  
(2) 1 point (bottom · 2)

(3) 2 points (bottom · 1)  
(4) 2 points (bottom · 2)

(5) 1 point (bottom · 1)