

# Instrument Panel Wiring Harness LH

WIRING SYSTEM

## 68. Instrument Panel Wiring Harness LH


### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i2	20	★	D-1	R339	Rear wiring harness LH
i5	20	★	C-2		F/B
i10	40	★	B-3		Combination meter
i13	4	GR	C-3		Trunk lid opener switch
i28	4	GR	C-2		OP connector (fog light switch)
i51	2	★	A-4		Sunload sensor
i55	2	★	B-4		In-vehicle sensor
i79	6	★	C-2		Illumination control switch
i84	35	★	C-2		Body integrated unit
i101	28	★	D-2	D84	Front door cord LH
i102	20	★	D-1	R167	Rear wiring harness LH
i122	12	B	A-5		MFD
i150	14	★	B-4		Push button ignition switch
i158	2	★	B-2		Side tweeter LH (without audio amplifier)
	4	★	B-2		Side tweeter LH (with audio amplifier)
i166	4	★	B-2		J/C
i167	4	★	B-2		
i171	31	★	C-2		Body integrated unit
i229	12	★	C-2	B551	Bulkhead wiring harness
i230	17	GR	C-2	B552	
i231	20	★	C-2	B553	
i232	8	★	B-4		J/C
i233	8	★	B-4		
i234	6	GR	C-2		VDC OFF switch
i240	8	B	A-4		MFD

★ : White or natural color

# Instrument Panel Wiring Harness LH

WIRING SYSTEM

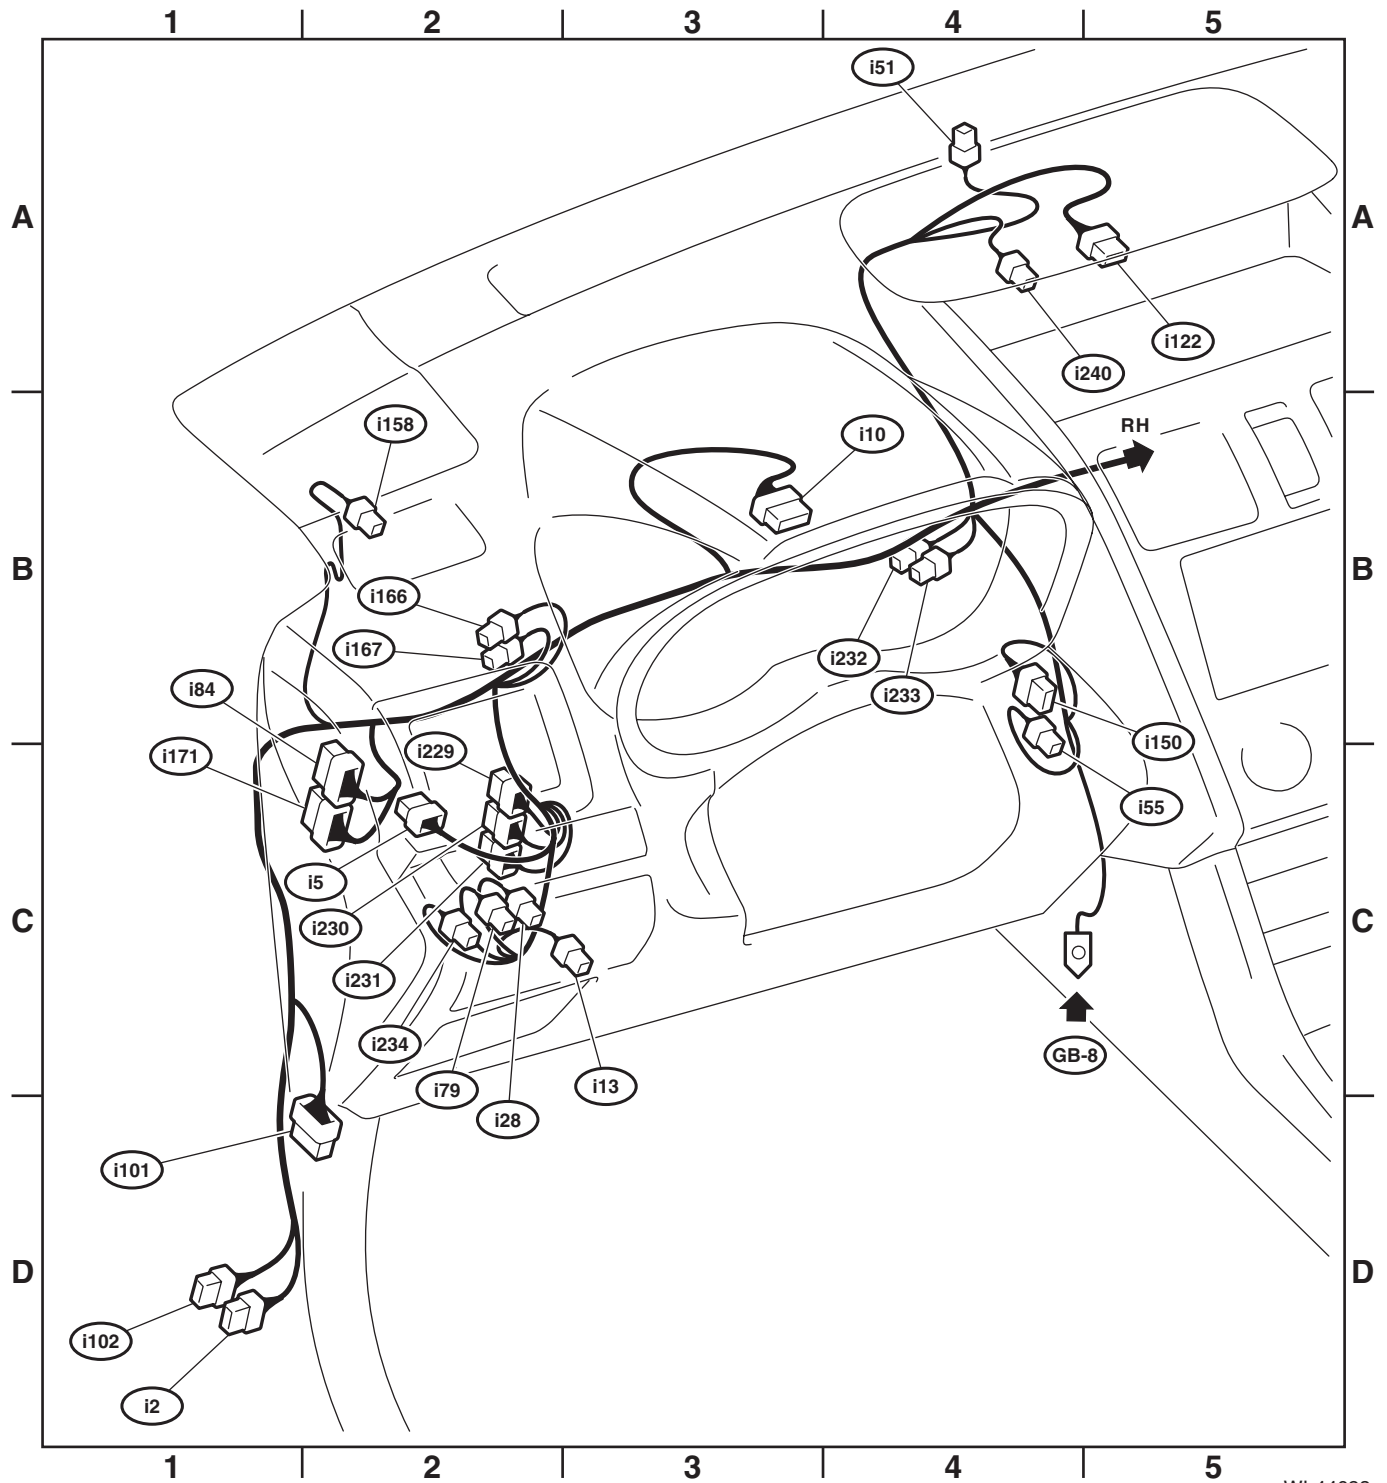

WI-44623