


Panel Replacement

7-6. Toe Board Reinforcement (total replacement)

A: REMOVAL

• Overall view (LH)

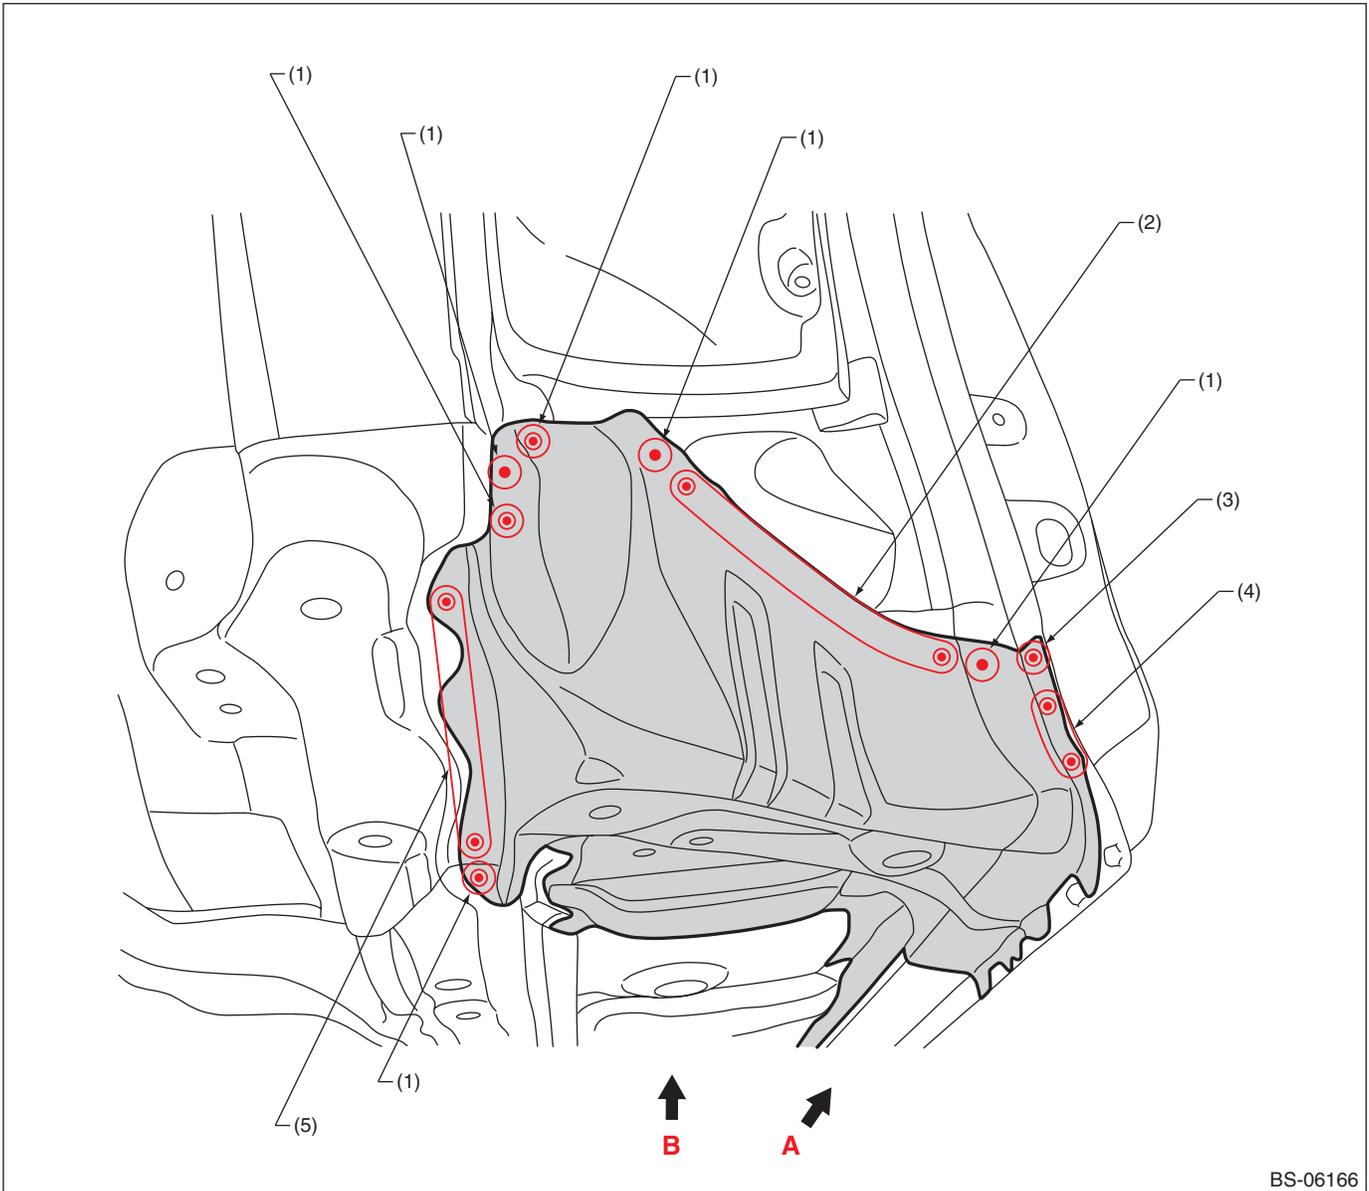


(1) 1 point (outside · 1)
(2) 6 points (outside · 1)

(3) 1 point (inside · 1, belt sander)
(4) 3 points (inside · 1, belt sander)

(5) 3 points (outside · 1)

Panel Replacement

- (RH)

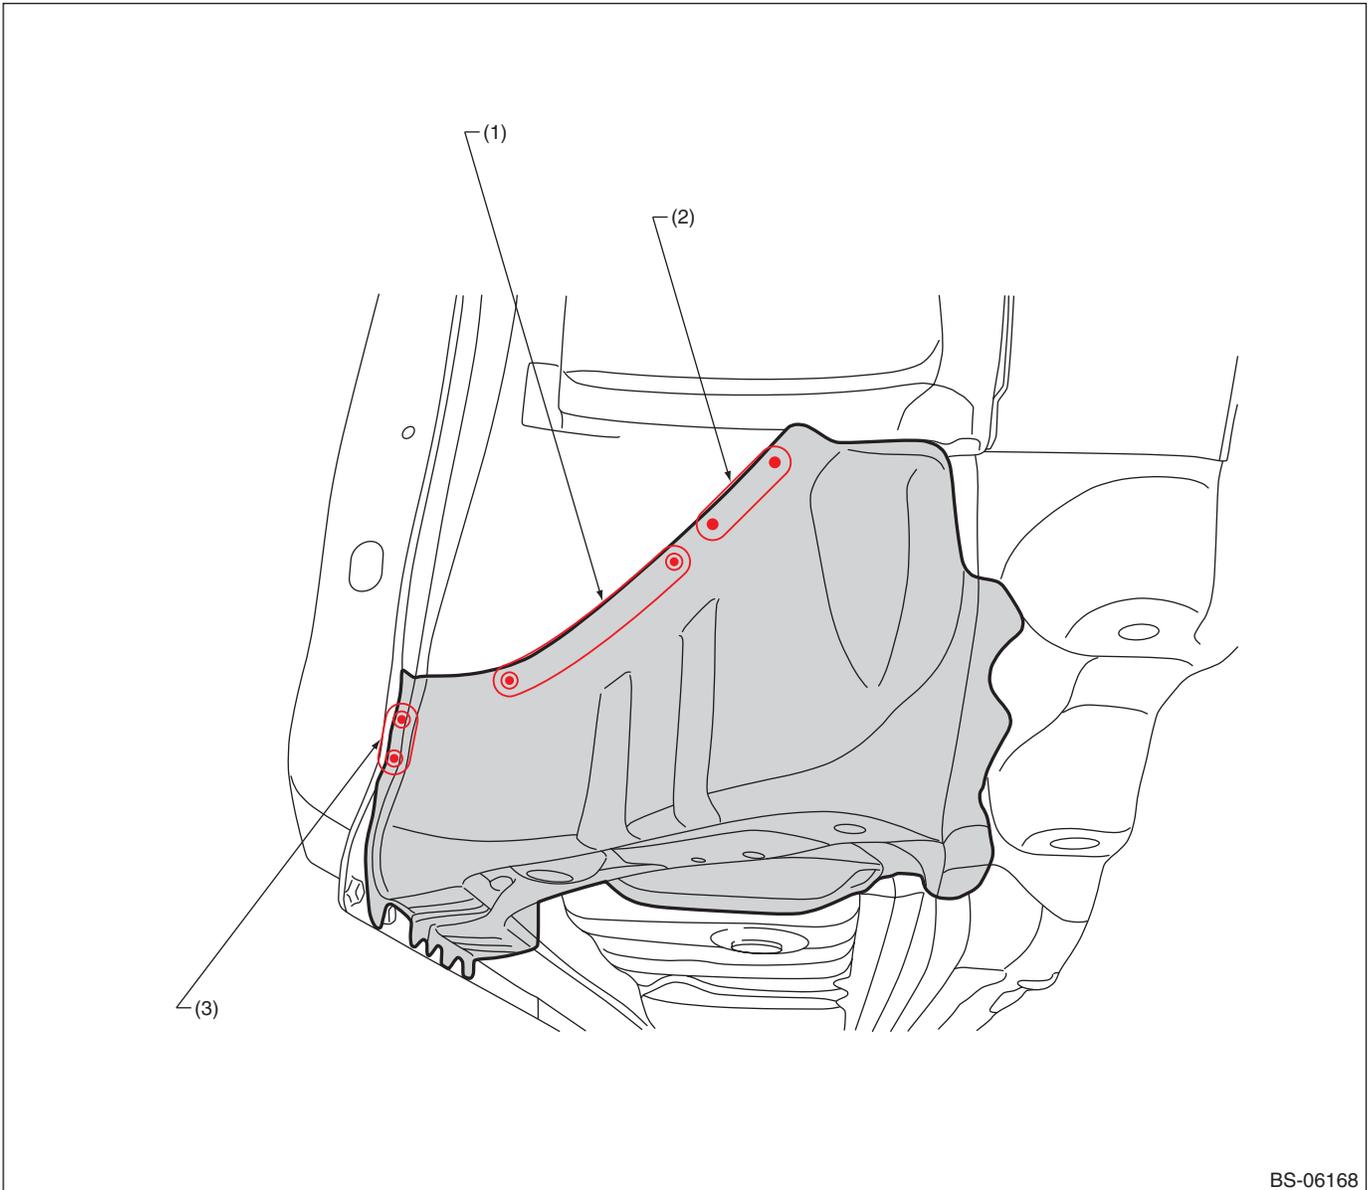

BS-06168

(1) 4 points (outside · 1)


(2) 3 points (outside · 1)

(3) 2 points (inside · 1, belt sander)

Note: Designations in the RH diagram are the same as in the LH diagram, except for the indicated points.

Panel Replacement

• Views 1

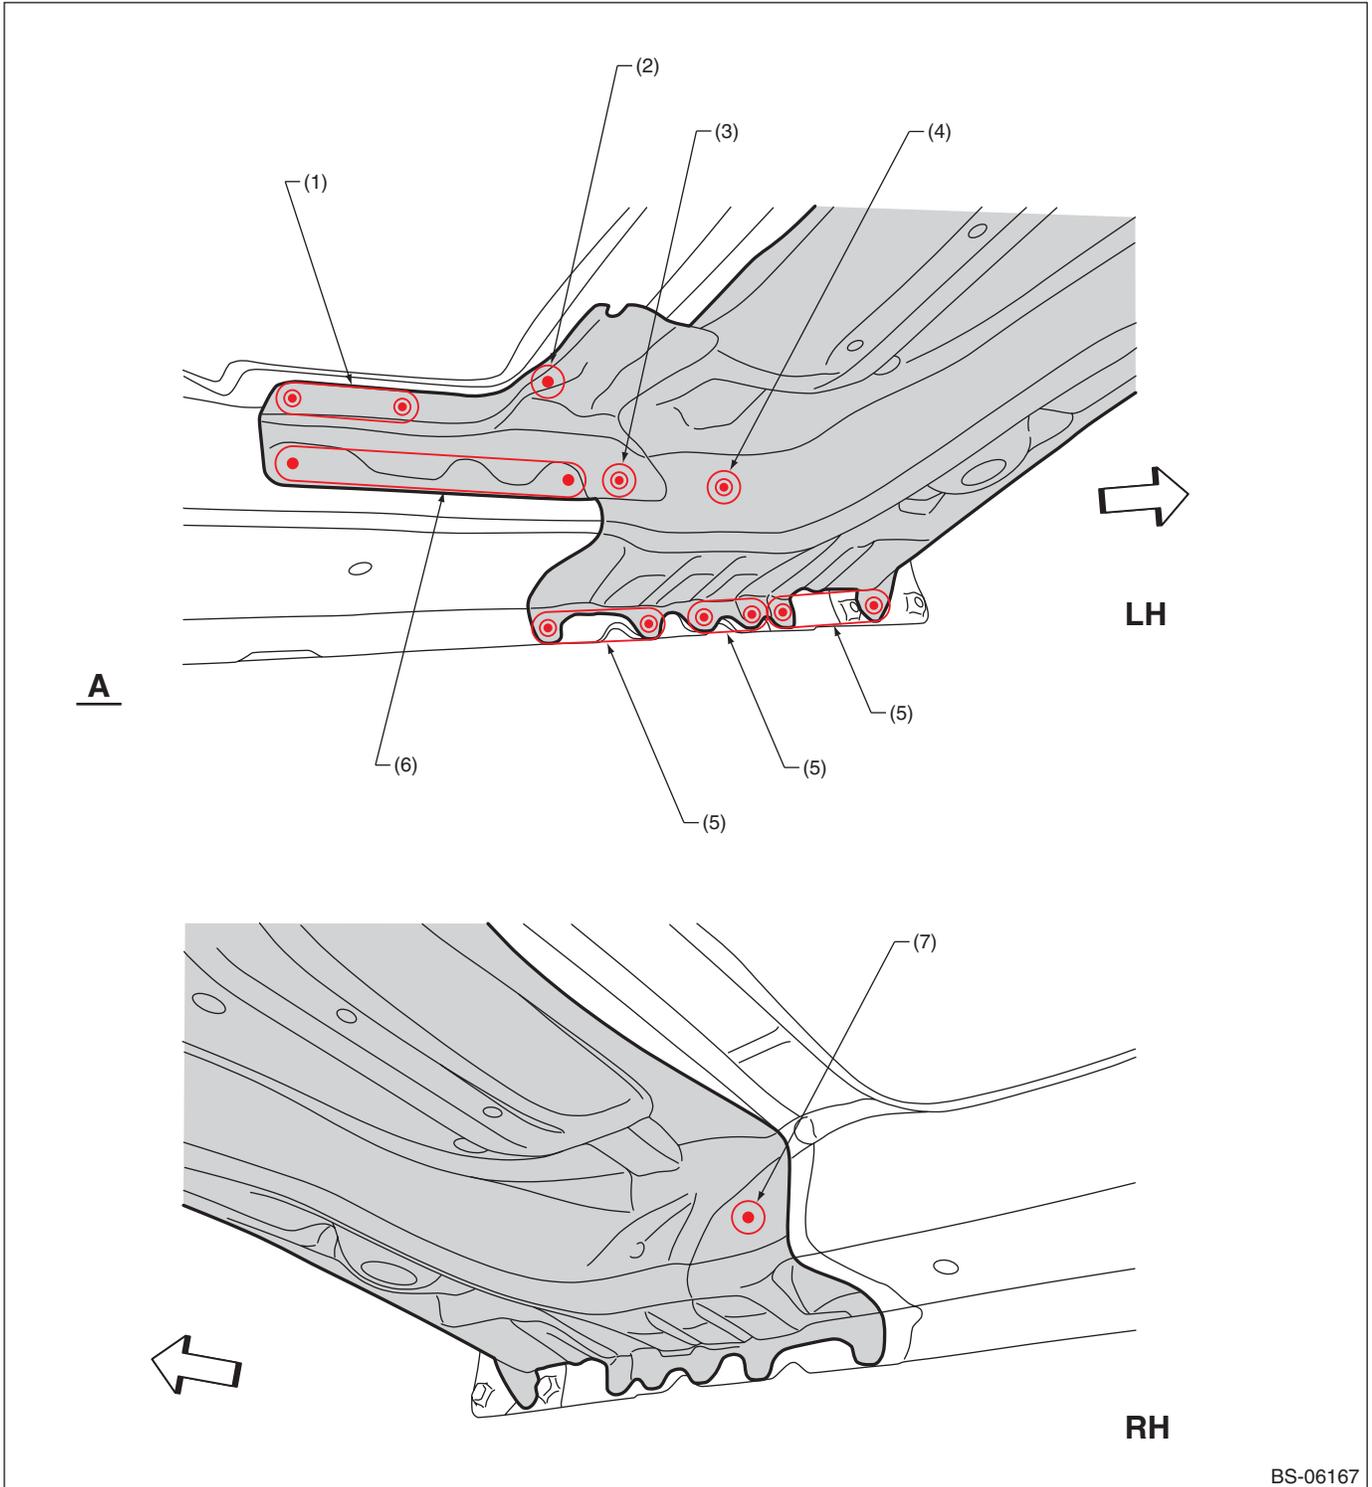


BS-06167

- | | | |
|---------------------------|--|--------------------------|
| (1) 2 points (bottom · 1) | (4) 1 point (inside · 1, belt sander) | (7) 1 point (inside · 1) |
| (2) 1 point (bottom · 1) | (5) 2 points (inside · 1) | |
| (3) 1 point (inside · 2) | (6) 4 points (inside · 1, belt sander) | |

Note: Designations in the RH diagram are the same as in the LH diagram, except for the indicated points.

Panel Replacement

• Views 2

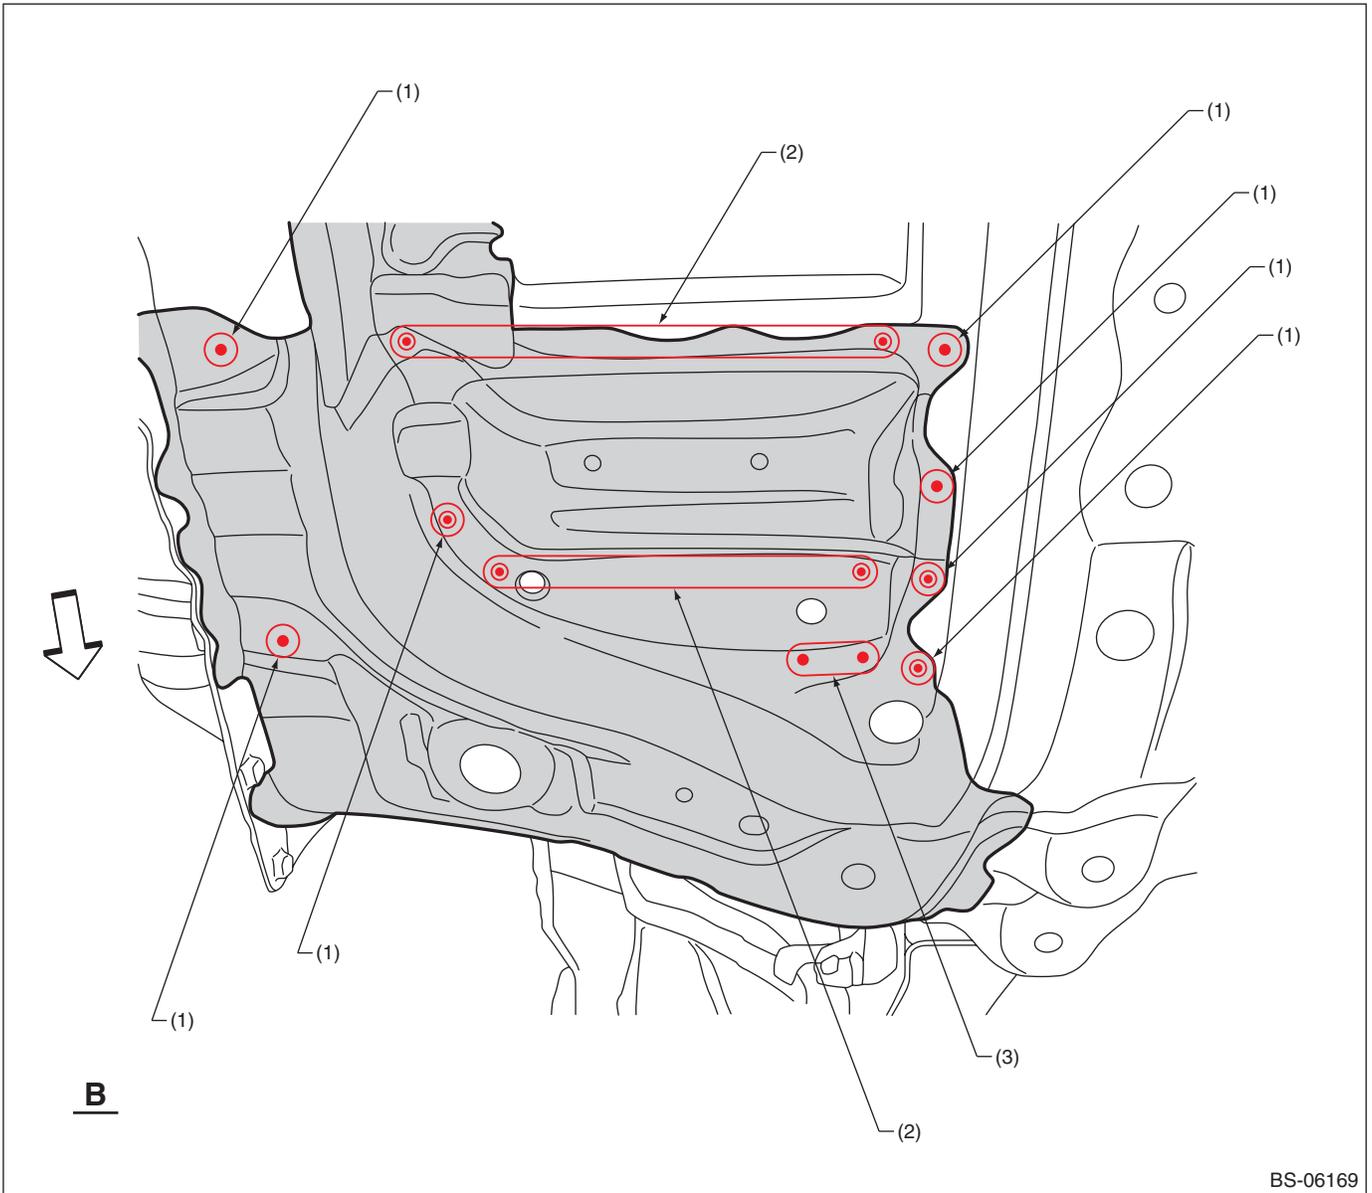

BS-06169

(1) 1 point (bottom · 1)

(2) 5 points (bottom · 1)

(3) 2 points (bottom · 1)