


Panel Replacement

7-15. Side Sill Inner Rear (total replacement)

A: REMOVAL

- Overall view (Rear quarter outer & inner and side sill reinforcement outer removal condition)

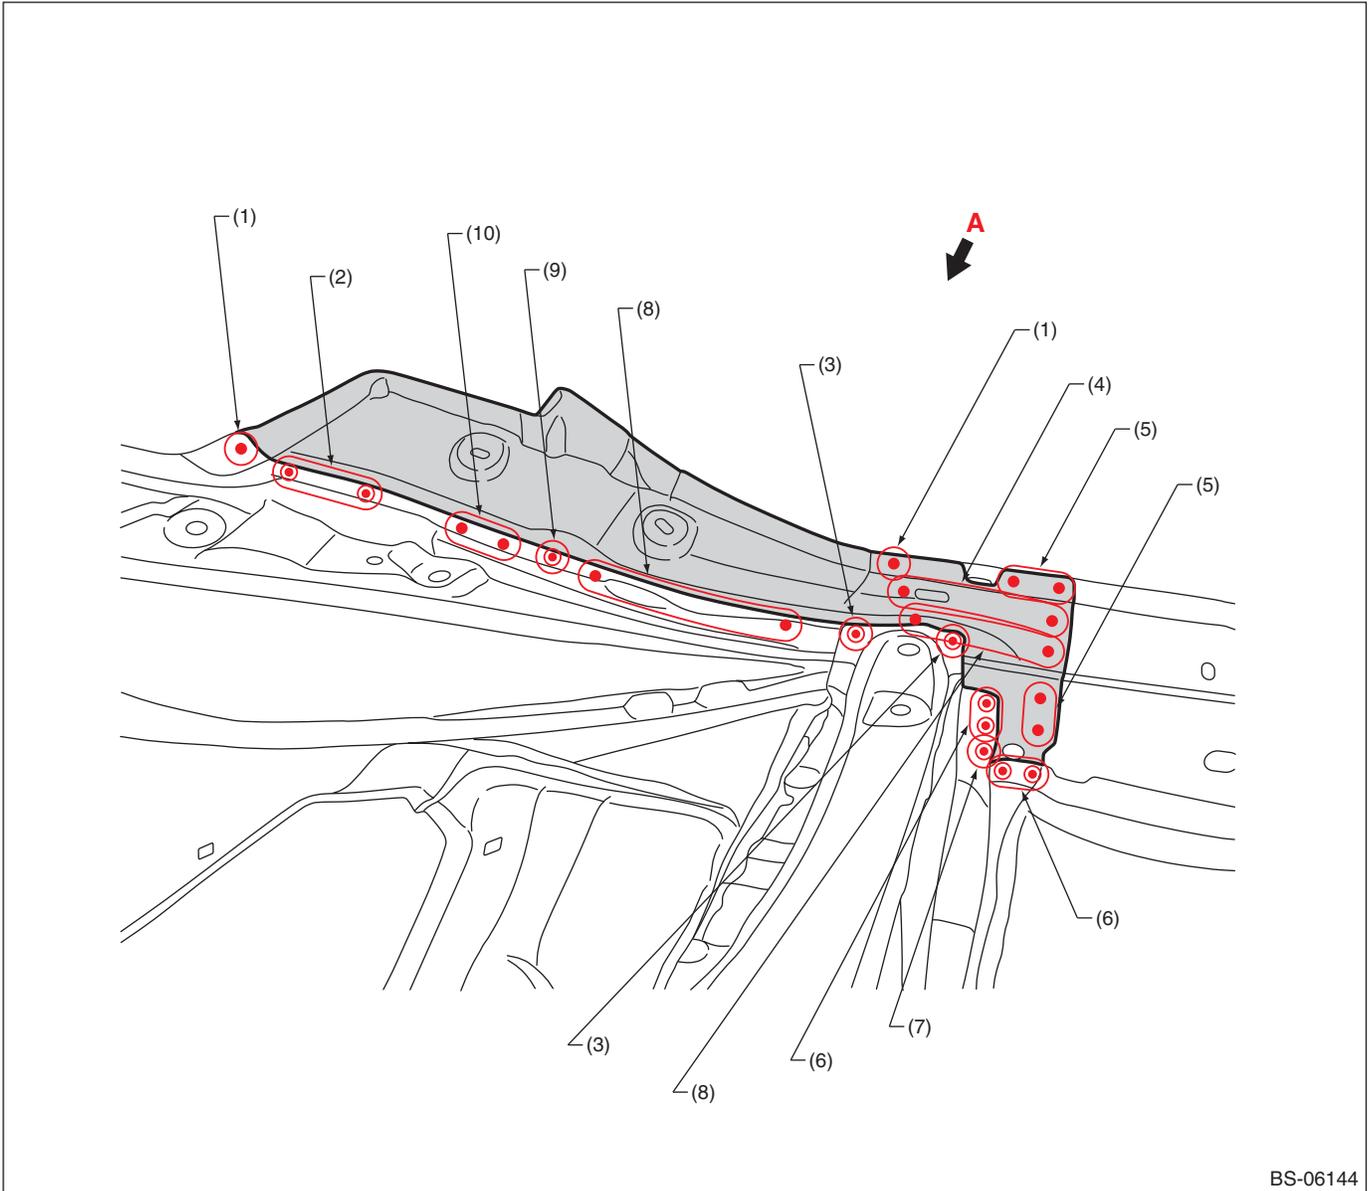


BS-06144

- | | | |
|---------------------------|--|-------------------------|
| (1) 1 point (outside · 1) | (5) 2 points (inside · 1) | (9) 1 point (top · 1) |
| (2) 2 points (bottom · 1) | (6) 2 points (outside · 1, inside · 1) | (10) 2 points (top · 1) |
| (3) 1 point (top · 2) | (7) 1 point (inside · 2) | |
| (4) 4 points (top · 1) | (8) 3 points (top · 1) | |

Panel Replacement

• Views

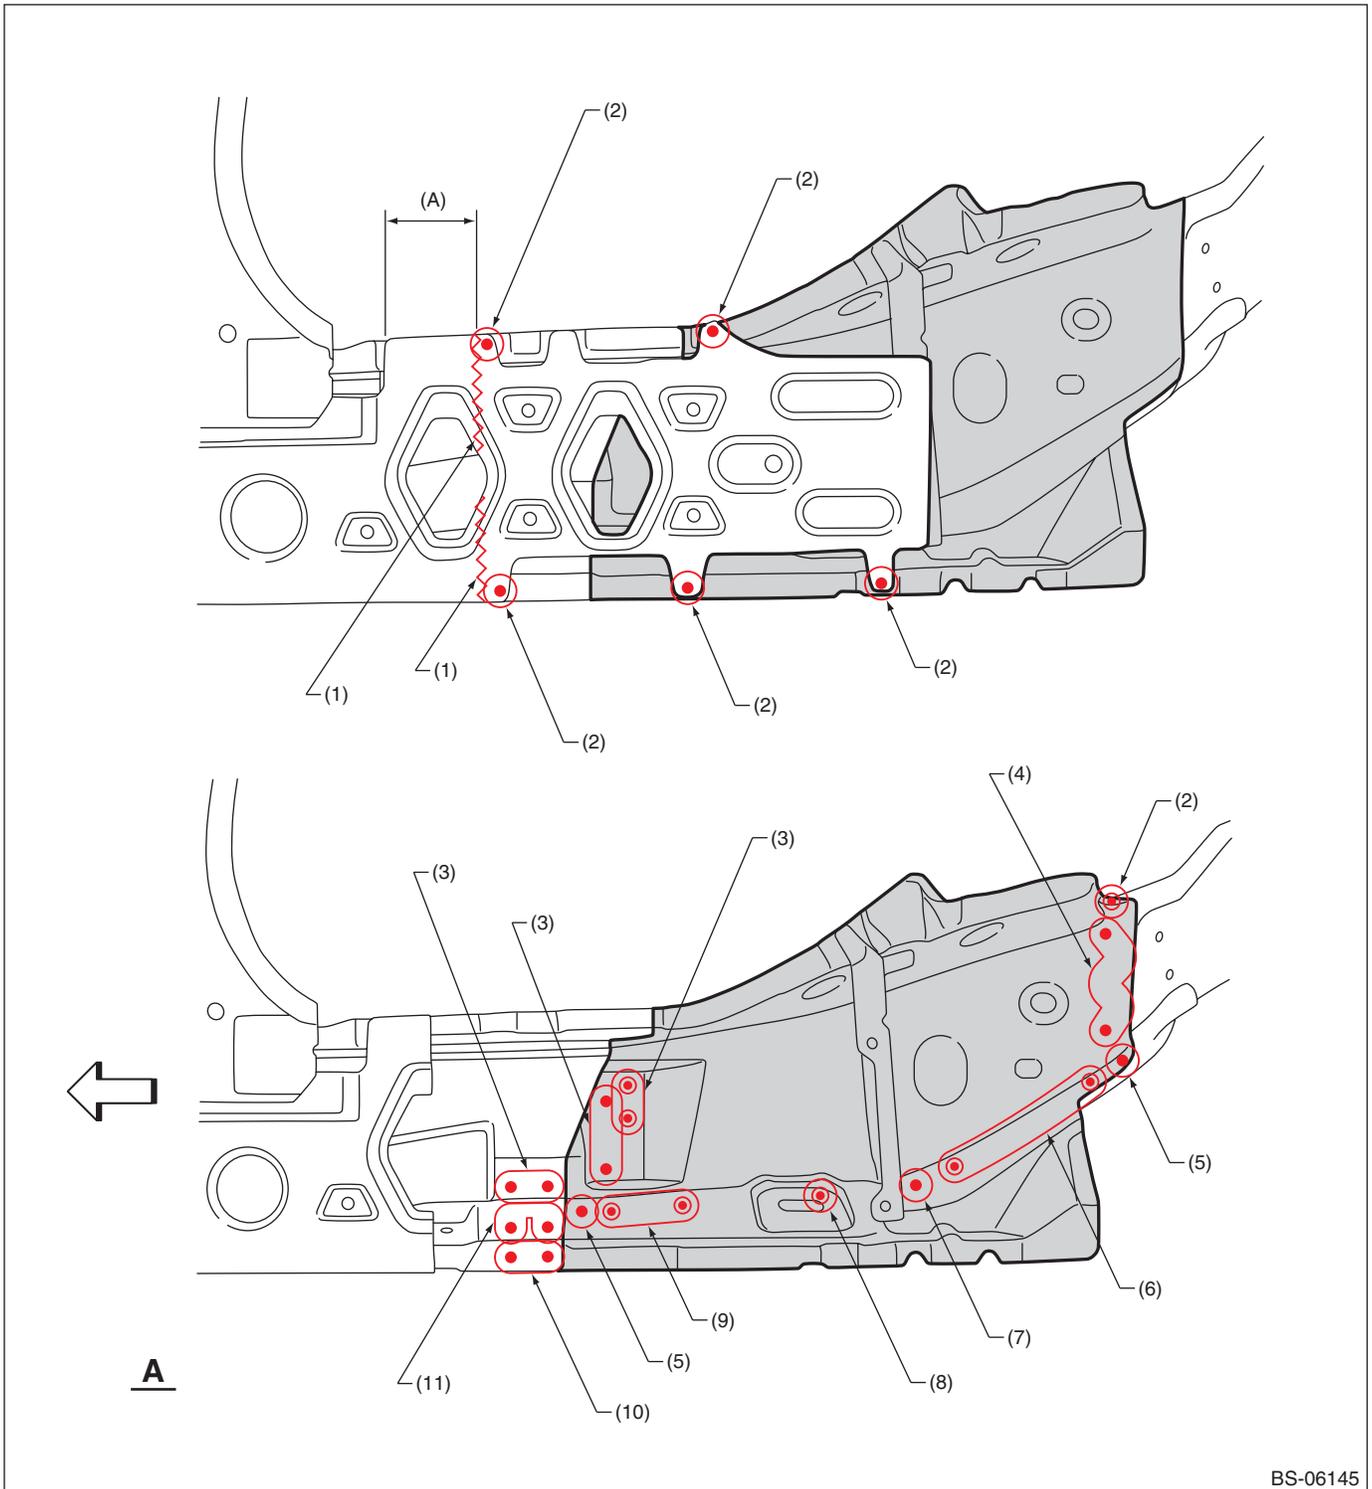

BS-06145

(A) 60 mm (2.36 in)

- | | | |
|----------------------------|-------------------------------------|-------------------------------------|
| (1) Rough cutting | (5) 1 point (top · 1, belt sander) | (9) 3 points (top · 1, belt sander) |
| (2) 1 point (outside · 1) | (6) 5 points (top · 1, belt sander) | (10) 2 points (inside · 1) |
| (3) 2 points (outside · 1) | (7) 1 point (top · 1) | (11) 4 points (bottom · 1) |
| (4) 5 points (outside · 1) | (8) 1 point (bottom · 1) | |