


Panel Replacement

B: INSTALLATION

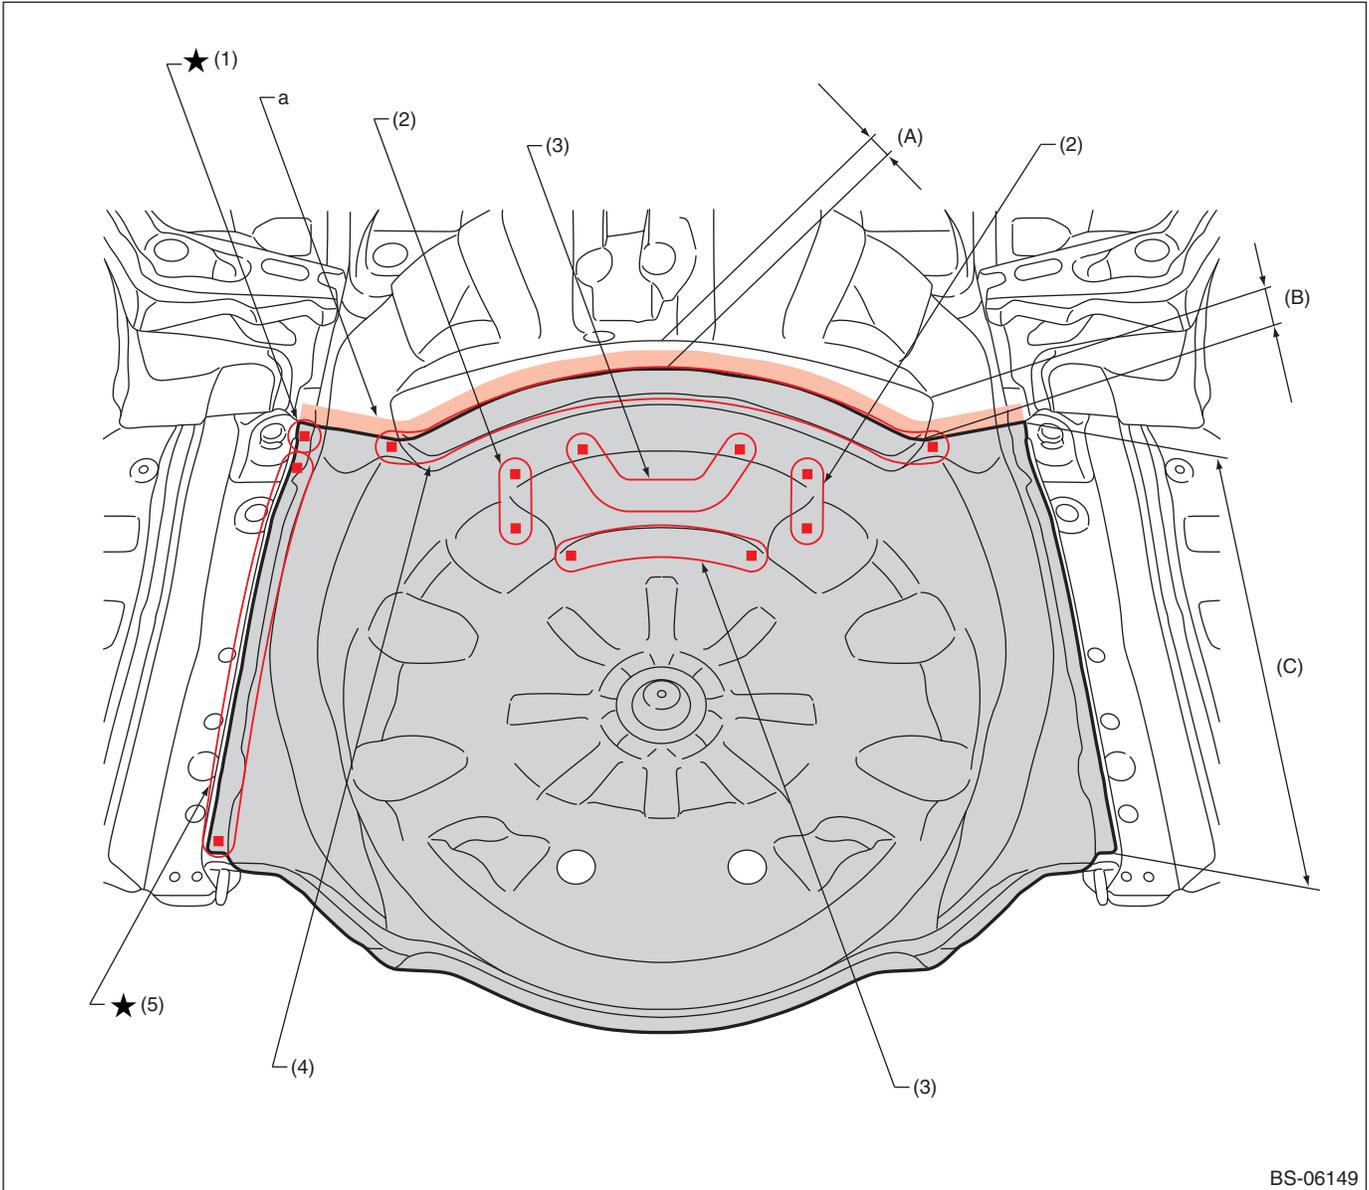

(A) 30 mm (1.18 in)

(B) 60 mm (2.36 in)

(C) 470 mm (18.50 in)

(1) 1 point (service)

(3) 4 points (service)

(5) 9 points (service)

(2) 2 points (service)

(4) 12 points (service)

Note: Apply a sealing agent to the floor pan panel fitting parts of part "a".

For locations marked by "★": the welding method and the number of welding points are the same on the left and the right.